



AE3 - 2 GH

Product Manual

Document Version 1.0
Jul. 2026

Copyright & Disclaimer – OneMiners.com

© OneMiners.com, 2026. All rights reserved.

This manual contains both official documentation provided by the manufacturer (IceRiverEU) and additional materials created by OneMiners.com, including but not limited to profitability calculators, hosting service information, setup categories, and platform-specific guidance.

The original manufacturer manuals remain the exclusive property of their respective copyright holders. They are included here solely for reference and convenience to OneMiners.com customers. No ownership of such content is claimed by OneMiners.com.

All supplemental sections, tools, and explanatory materials developed by OneMiners.com are protected by copyright and may not be copied, modified, or redistributed without prior written permission from OneMiners.com.

Information in this manual is provided “as is” and may be subject to change without prior notice. While every effort has been made to ensure accuracy, OneMiners.com makes no warranties, express or implied, regarding completeness, accuracy, or fitness for a particular purpose. Customers should always confirm the latest specifications and updates with the original manufacturer.

Use of profitability calculators, hosting information, and related tools is for guidance only and does not constitute financial advice. OneMiners.com is not liable for any losses, damages, or misinterpretations arising from the use of this manual or associated tools.

All product names, trademarks, and brand references belong to their respective owners.


Table of Contents


1. Product Overview	2
Appearance	2
2. Function	4
Start up	4
Access Machine	6
Language Switch	7
Change Password	8
Configuring mining pools and wallets	9
View Hashrate Chart	12
Network Settings	13
Firmware Upgrade	14
Factory Reset	15
Shutdown/Reboot	16
3. Common Faults and Solutions	17
Faults Solutions	17
4. OneMiners Enhanced Manual	20
Miner Details (OneMiners Platform)	20
Pool Settings	22
Earnings & Fees	22
Hardware Status	23
5. OneMiners Warranty	24
7-Year Extended Warranty	24
Circlehash Group Data Centers	24
Warranty Coverage	24
Exclusions	24

Claim Process	24
6. Wallet.....	25
Automatic Mining Balance	25
Withdrawal	26
Exchange	27
7. AI Smart Mining.....	28
What is AI Smart Mining?	28
How It Works	28
Control on Dashboard	28
Daily Profitability Calculations (AsicProfit.com).....	30
Additional Notes	31
Contact & Support	32

1. Product Overview

1.1 Appearance

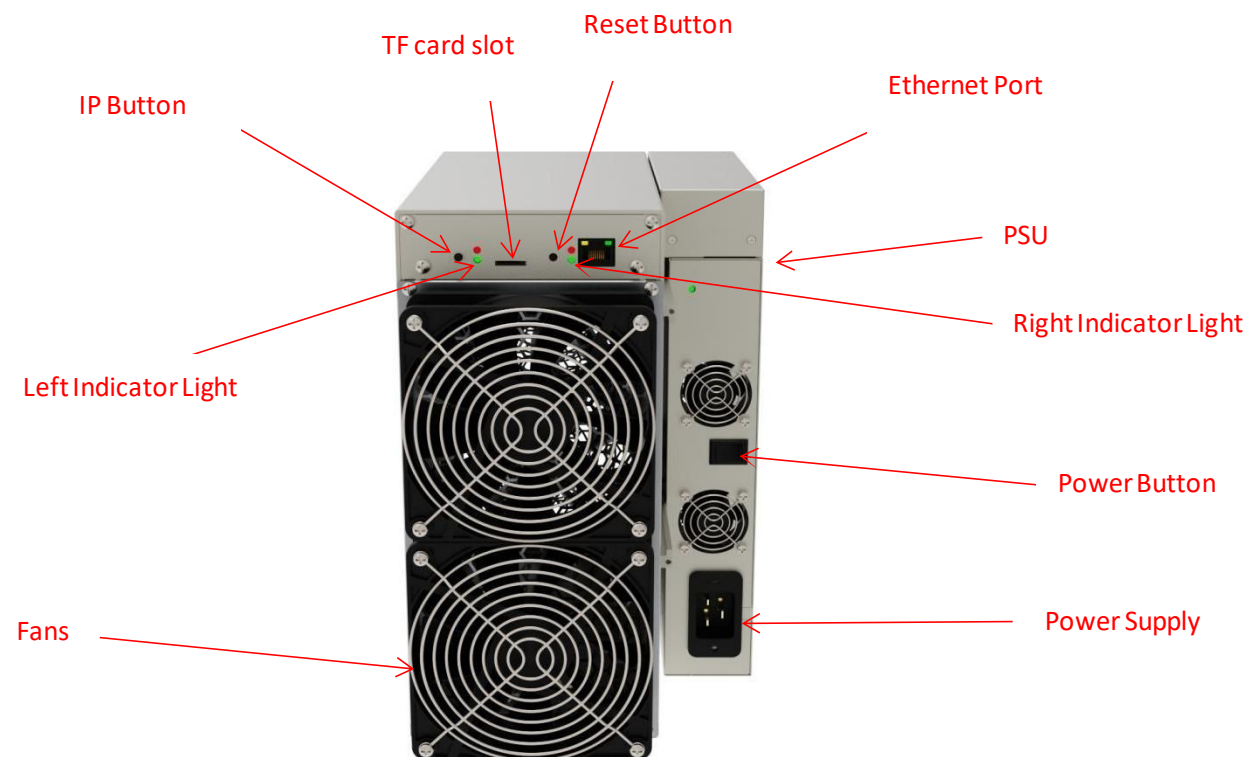

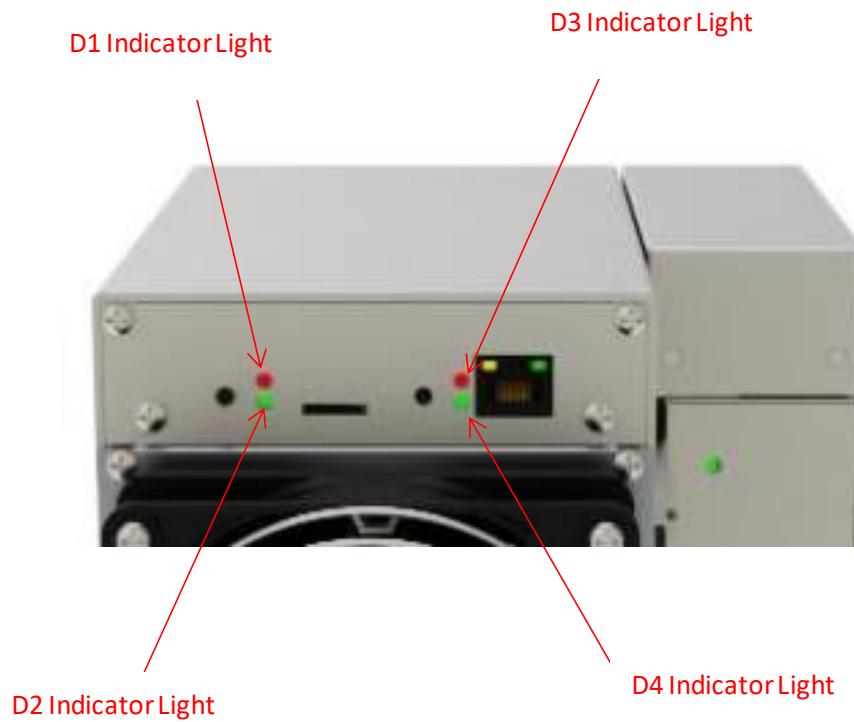

***Indicator Description:**

Machine Status	Indicator light status
Running Normally	D2 light blinks, D1, D3, D4 lights are off.
Fan Abnormality	D1, D3 lights blink, D2, D4 lights are off.
Network Issues	D1, D2 lights blink, D3, D4 lights are off.
High-temperature Alarm	D2, D3 lights blink, D1, D4 lights are off.

Interface specification:

Power interface	AC power input: 200V--250V 50-60HZ
-----------------	--

2. Function

2.1 Start up

2.1.1 Precautions

- Check whether there is physical interference causing damage to the machine and beware of electric shock.
- Please check if the cable connection is firm before powering on, and pay attention to the safety of electricity.
- Keep the hash board and other parts away from water or exposed to moisture.
- Please make sure the ambient temperature is between 0-40° C.
- Please avoid covering the surface of the machine due to the high temperature of the machine surface during operation.
- Do not place flammable and explosive substances around the machine during operation.
- Please make sure the humidity of the environment is below 90%.
- Please keep the environment clean to prevent dust, hair, willow and other foreign objects from entering the machine and causing damage to the machine.
- Use a stable voltage.
- The machine, hash board or board parts being crushed or burned due to improper environment is not covered by the warranty.
- Customers should not disassemble the machine by themselves without permission from ICERIVER after-sales team.

2.1.2 Check before start up

Preliminary inspection of the miner before operation:

- Check the appearance of the package for deformation.
- Check the appearance of the machine for deformation and breakage. Also check the fan and cable.
- Check if there is any strange sound in the machine and observe if the heat sink is off.

***Note:** Please do not disassemble the machine by yourself. The machine will not be covered by the warranty if the user disassembles the machine without permission.


2.1.3 **Boot**

Please connect the miner to the Ethernet first, and then plug in the power cord. Turn on the machine, during the boot process, the red and green indicator lights on both sides will remain steady. Wait until the D2 indicator light blinks (if it doesn't blink for more than 10 minutes, please check the network), and the D1, D3, D4 indicator lights all go off. This indicates that the miner has started successfully.

2.2 Access Machine

2.2.1 Obtain Machine IP

1. Obtain the IP address of the machine through download and unzip the **batch processing tool** provided by our company (please refer to the official website to download: <https://www.iceriver.io/tutorial/>).
2. Click the [Detect IP] button and long press the machine's IP button for 1-2s after the pop-up window to get the machine IP.

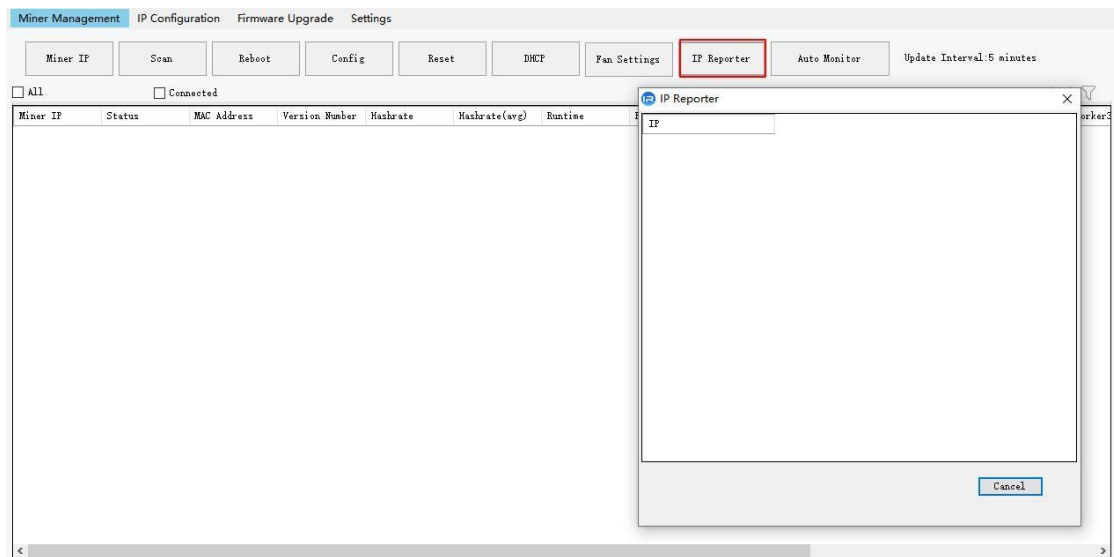

2.2.2 Access Machine

1. Open your web browser (Chrome browser is recommended) and enter the machine's IP address in the address bar. You will see the following interface.
2. Use the default username "admin" and the default login password "12345678" to log in to the machine.



2.3 Language Switch


1. Click [\[Language\]](#) in the upper right corner of the page to switch between Chinese or English.



2.4 Change Password

To protect your property security, please change the miner password after the first time you turn on the machine.

1. Click [\[User Settings\]](#), enter the current password and the new password as shown below, and click the [\[Save\]](#) button.

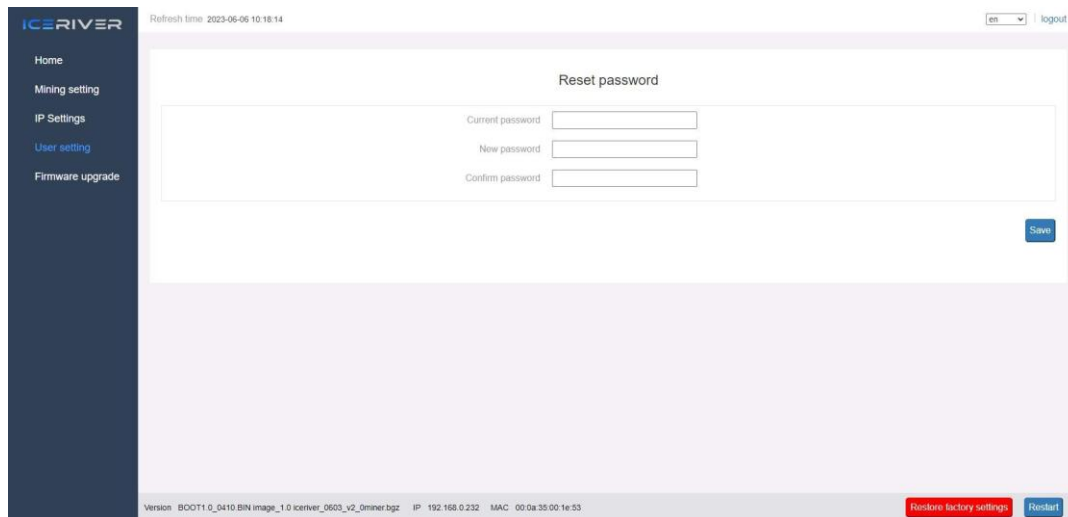

The screenshot shows the Iceriver web interface. On the left is a dark blue sidebar with navigation links: Home, Mining setting, IP Settings, User setting (highlighted in blue), and Firmware upgrade. The main content area has a light purple background. At the top of this area, it says 'Reset password'. Below this, there are three input fields labeled 'Current password', 'New password', and 'Confirm password'. To the right of these fields is a blue 'Save' button. At the top right of the interface, there is a language dropdown set to 'en' and a 'logout' link. At the bottom of the interface, there is a status bar with technical information: 'Version: B00T1.0_0410 BIN image_1.0 iceriver_0602_v2_0miner.bgz', 'IP: 192.168.0.232', and 'MAC: 00:0a:35:00:1e:53'. On the right side of this bar are two buttons: 'Restore factory settings' (red) and 'Restart' (blue).

2. After the password change is completed, you need to log in again with the new password.

2.5 Configuring mining pools and wallets

2.5.1 Add

1. Go to the [\[Mining Setting\]](#) page and find [\[Pool Configuration\]](#).

The screenshot shows the 'Pool configuration' page in the Iceriver AE3 web interface. It features a sidebar with navigation options: Home, Mining setting, IP Settings, User setting, and Firmware upgrade. The main content area is divided into sections: 'Locate miner' (with a toggle), 'Pool configuration' (a table for configuring three mining pools), and 'Hardware configuration' (with 'Fan speed(percent)' and 'Mode' dropdown). The 'Pool configuration' table has columns for 'Pool addr', 'Wallet/Worker', and 'Password(Optional)'. The 'Hardware configuration' section includes a 'Fan speed(percent)' input field and a 'Mode' dropdown menu. A 'Save' button is located at the bottom right of the 'Pool configuration' section. The footer displays version information and system status.

You can configure three mining pools with the following reference example: Pool1:

stratum+tcp://kas.eu1.whalepool.com:15121

Wallet/Worker:


aleo:ndm9tlsgdmrcha4pg83lwwrka0giya38teh0g5qc4prapavmh7rkyxuzd6w2w-~~worker~~

Wallet address

Worker name

* The password is optional and can be set or not, it does not affect mining.

2. Click Save and a configuration success window will pop up.
3. After successful configuration, click [\[Reboot\]](#) and wait for the machine to reboot (do not power off during the reboot process).
4. The information on the home page shows that the pool is " connected ", which means the pool is successfully connected.

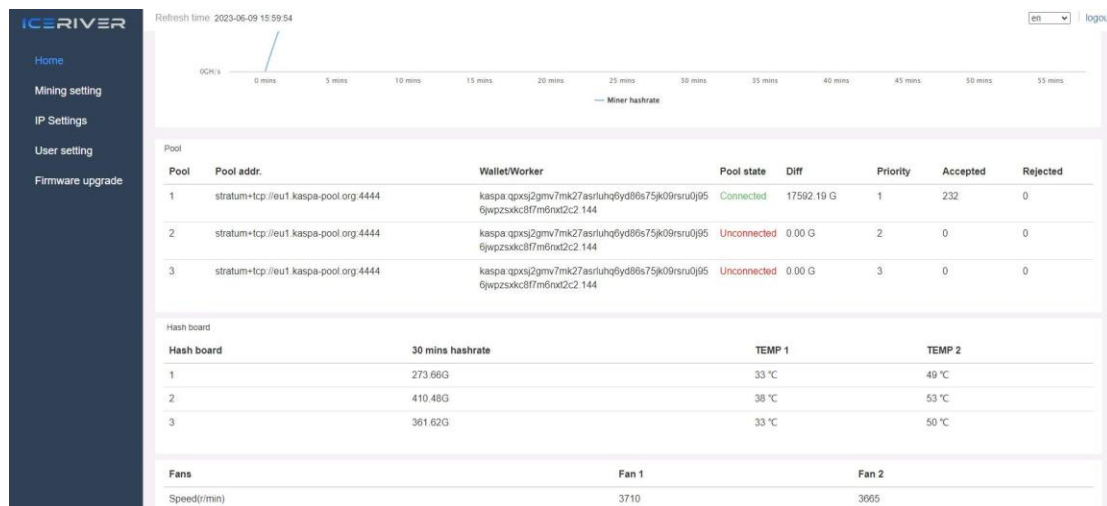

*The default pool configuration is the configuration of our company when testing, please configure your own mining wallet address before you start mining, please do not use the default configuration.

*If pool 1 is not connected, the machine will automatically connect to pool 2. If pool 2 is not connected, the machine will automatically connect to pool 3.

* If the configuration fails you can configure it again and restart it.

The following mining pools are known to be compatible, and will be continuously updated:

KS0,1,2,3L,3M,5L,5M compatible mining pools:

Whalepool	PPLNS	stratum+tcp://kas.eu1.whalepool.com:15121
Humpool	PPLNS	stratum+tcp://kas.eu1.humpool.com:18083
Aleo-pool	PPLNS	stratum+tcp://eu1.aleo-pool.org:4444
	SOLO	stratum+tcp://eu1.aleo-pool.org:4441 PPLNS
Woodypooly		stratum+tcp://pool.eu.woolypooly.com:3112
	SOLO	stratum+tcp://pool.eu.woolypooly.com:3113
Herominers	PPLNS	stratum+tcp://ru.aleo.herominers.com:1210
	SOLO	stratum+tcp://ru.aleo.herominers.com:1210
K1pool	PPLNS	stratum+tcp://eu.aleo.k1pool.com:23222 SOLO
		stratum+tcp://eu.aleosolo.k1pool.com:23114
Accpool	PPLNS	stratum+tcp://acc-pool.pw:16061
F2pool	PPLNS	stratum+tcp://kas-euro.f2pool.com:1400
Kryptex	PPLNS	stratum+tcp://kas.kryptex.network:7777/6666
	PPLNS	stratum+tcp://stratum.tw-pool.com:10007
tw-pool.com	PPLNS	stratum+tcp://stratum2.tw-pool.com:10005
2miners	PPLNS	stratum+tcp://kas.2miners.com:2121
NiceHash		stratum+tcp://kheavyhash.auto.nicehash.com:9200

* The above mining pool information is the mining pool address we used for testing purposes. Before connecting to the mining pool, please log in to the respective mining

pool's official


website and check if the mining pool address has changed.

2.5.2 Remove

1. Clear the information in [\[Pool Configuration\]](#) and click [\[Save\]](#) to remove the mining pool.

2.5.3 Adjusting fan speed

1. Find [\[Hardware Configuration\]](#) in [\[Mining Setting\]](#).
2. Check [\[Fan Speed\]](#).
3. Select the operating mode or manually adjust the fan speed (**Note: After manually adjusting the fan speed, the automatic speed control function will be disabled, be cautious of high temperatures**). After making the changes, click on "Save."

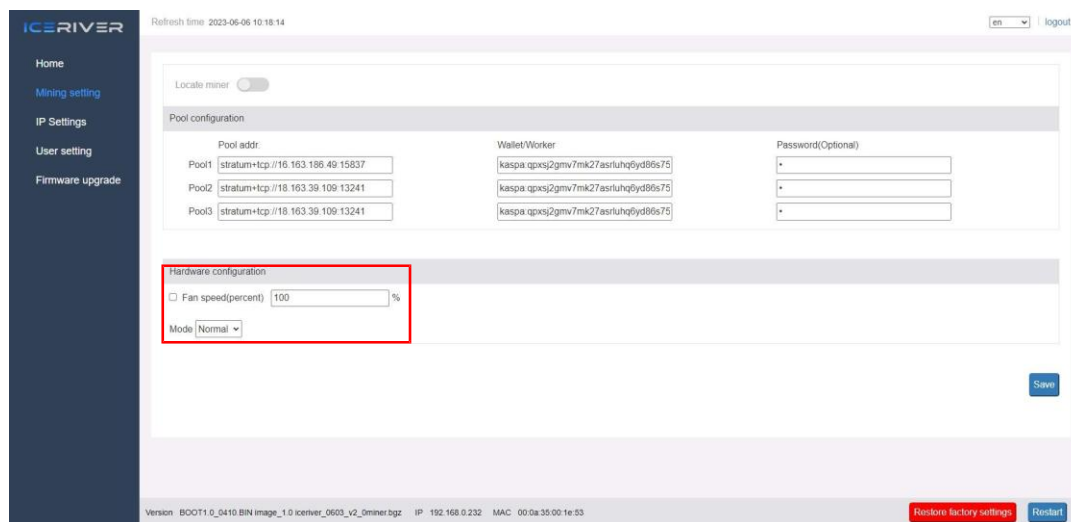

* After powering on, the fan will operate at a low speed. Only after the self-check process, the fan will start running at full speed. The default fan speed is set to maximum. If the self-check detects any fan abnormalities, the mining process will not begin.


* The machine will stop mining in sleep mode.

2.6 View Hashrate Chart

1. Click [\[Home\]](#) to view the Hashrate Chart.

* After 5 minutes of connecting to the pool, you can view the miner's hashrate and hashrate chart, the chart is updated every 5 minutes.

* Under Hash board, you can view the machine temperature and fan speed, which can monitor the working status of the machine in real time.

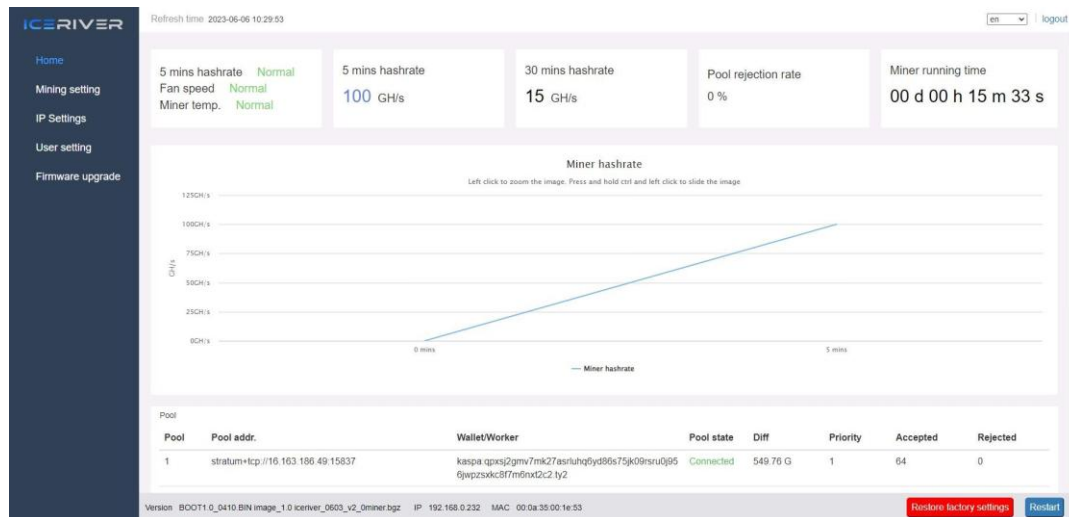

2.7 Network Settings

The factory default is DHCP mode, users can set the IP mode according to their needs. Set static IP:

1. Click [\[IP Settings\]](#), select *Static* in [\[Protocol\]](#), fill in the IP information according to the user, and then click [\[Save\]](#) button.
2. After saving the configuration, click [\[Reboot\]](#) and wait for the machine to reboot (do not power off during the reboot).

Refresh time: 2023-06-06 10:29:53

en | logout

IP configuration

Network information
eth0
MAC: 00:0a:35:00:1e:53
IP: 192.168.0.232
Subnet mask: 255.255.255.0

Host name: petalinux_conf13

Protocol: Static

IP: 192.168.0.232

Subnet mask: 255.255.255.0

Gateway: 192.168.0.1

DNS server: 192.168.0.1

Save


Version: BOOT1.0_0410 BIN image_1.0 iceriver_0603_v2_0miner3gz IP: 192.168.0.232 MAC: 00:0a:35:00:1e:53

Restore factory settings Reboot

2.8 Firmware Upgrade

When the official website releases a new upgrade package, download it and upgrade it via Web.

1. Click [\[Firmware Upgrade\]](#), select the official upgrade package and click [\[Upgrade\]](#).
2. Wait for the pop-up window to show success and then click [\[Reboot\]](#) and wait for the machine to reboot (do not power off during the reboot process).
3. After reboot, the firmware upgrade is successful.

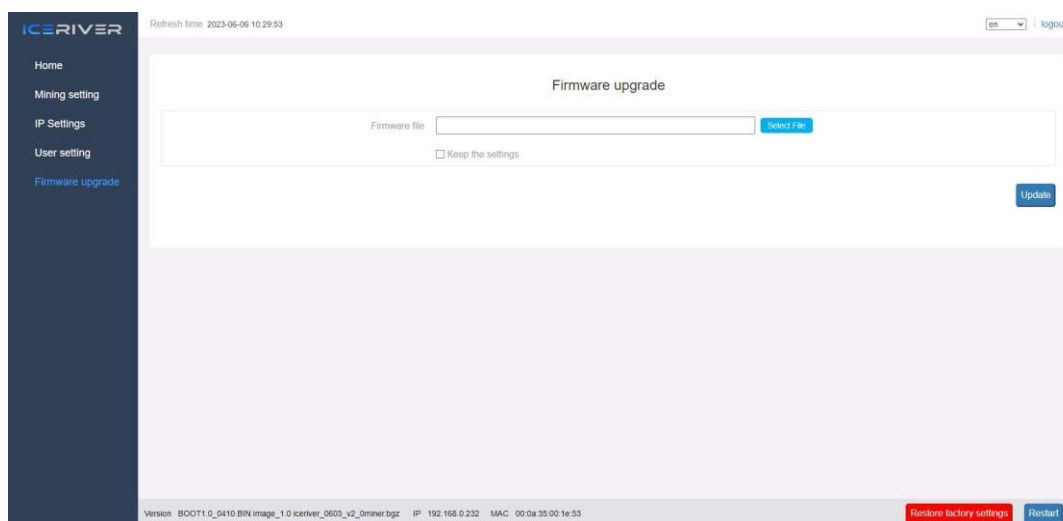

2.9 Factory Reset

When the machine has abnormal conditions, you can restore the factory settings through the **Rest Button** on the machine.

1. Press and hold the **reset button** for 5 seconds until the **D3** and **D4** lights start flashing simultaneously. After that, wait for the **D3** and **D4** lights to stop flashing and remain steady, indicating that the machine is in a reboot-ready state (**Do not power off the machine during the reboot process**).
2. After the machine reboot, reconfigure the mining pool and wallet to resume mining.

2.10 Shutdown/Reboot


2.10.1 Shutdown

1. Turn off the machine via the miner power button.

2.10.2 Reboot

1. Click [\[Reboot\]](#) in the bottom right corner of the home page, then click [\[OK\]](#) to confirm, then reboot the machine.

*** Note: do not power off the machine during the reboot process.**

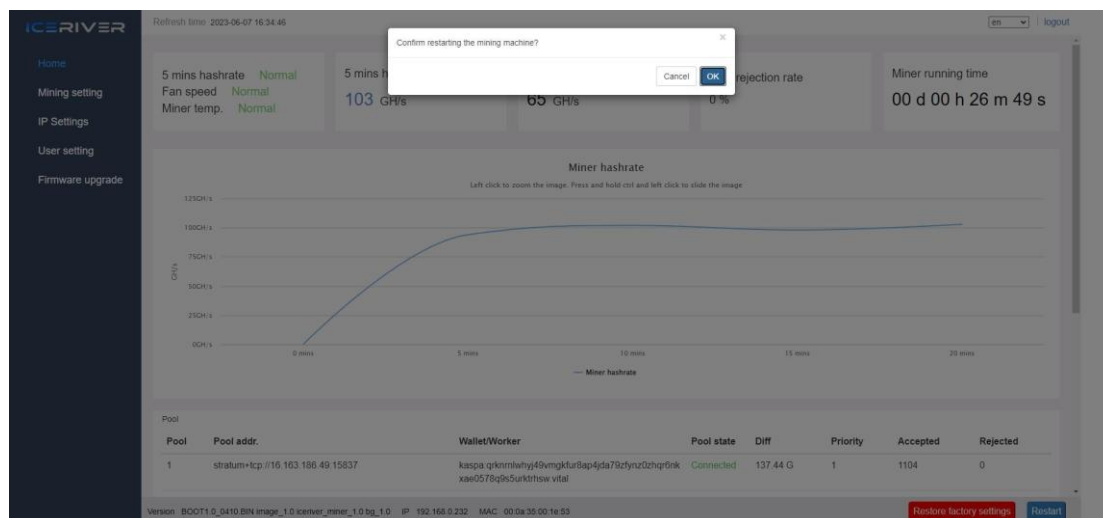

3 Common Faults and Solutions

3.1 Faults Solutions

3.1.1 Power Supply

- Cannot be turned on the machine after connecting power and turning on the power button:
 1. Check whether the power connector is loose or off, and whether the power cord is inserted tightly.
 2. Verify that the power supply input voltage is within the specified operating voltage range (AC 200V - 250V).

3.1.2 Network

- Network port light does not light up:

Check if the network port is plugged in.

3.1.3 Fan

- The fan does not turn after power is applied:
 1. Check the appearance of the fan and whether the metal mesh is extruded and deformed.
 2. Check if the mining pool is successfully connected.

3.1.4 High Temperature

- Machine temperature is too high:
 1. Check that the machine is not covered with.
 2. Check if the machine is placed in an environment with air convection.

3.1.5 Hashrate does not up to the target hashrate

- Hashrate does not up to the target hashrate:
 1. Check whether the machine fan is working properly, if the fan speed is abnormal, it will cause

the machine temperature is too high will trigger high temperature protection.

2. Short-term hashrate fluctuations, please observe the 12-hour average hashrate.

- The difference between the Web hashrate and the mining pool hashrate is large:

Check whether the network connection is normal.

3.1.6 Unable to enter the Web operation page

- The browser displays 404 after entering the miner IP:

Reboot the machine and re-enter the Web operation page.

3.1.7 Miner power reduces to around 150W-200W

- The miner's power will drop after the network abnormality, please check the indicator light blinking condition as well as check the network condition.


OneMiners Enhanced Manual

(Official IceRiverEU manual with integrated OneMiners platform insights)

Note: All illustrations and values shown are for demonstration purposes only. Actual figures in the OneMiners platform may vary depending on the specific ASIC miner model and configuration.

www.oneminers.com

Miner Details (OneMiners Platform)

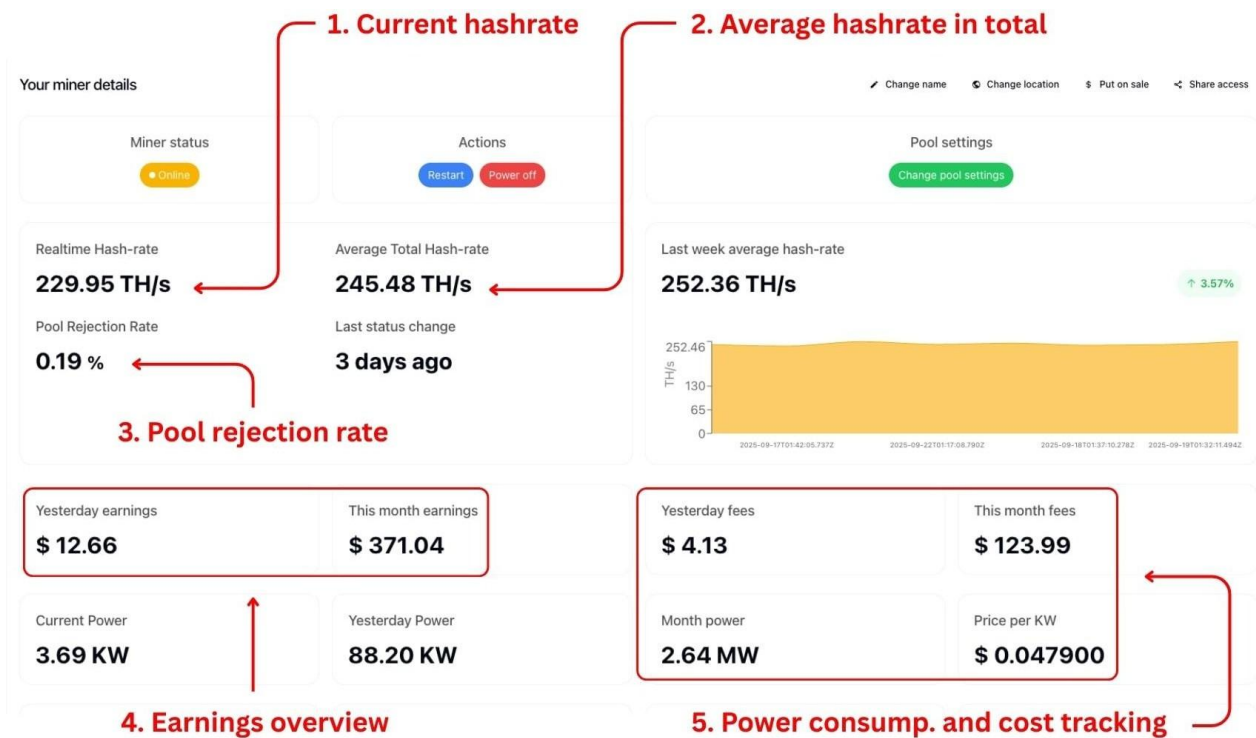

1. OneMiners Platform v1.2 - Miner Details

1. Realtime Hash-rate

- Displays the current hashrate of the miner in terahashes per second (TH/s).
- This value fluctuates in real time depending on network stability, hardware performance, and pool communication.

2. Average Total Hash-rate

- Shows the miner's average hashrate over a longer period, typically 24 hours.
- Provides a more reliable measure of overall performance compared to realtime spikes.

3. Pool Rejection Rate

- Percentage of submitted shares rejected by the mining pool.
- A low rejection rate (below 1%) indicates stable pool communication and efficient mining.
- Higher rates may suggest network latency, misconfiguration, or hardware issues.

4. Earnings Overview

- Displays estimated earnings for the selected period (daily, weekly, or monthly).
- Earnings are calculated based on accepted shares submitted to the mining pool.

5. Power Consumption and Cost Tracking

- Shows real-time and historical energy usage of the miner in kilowatts (kW) and megawatts (MW).
- Tracks electricity costs based on your configured price per kWh, helping you calculate net profitability.

6. How to Interpret These Numbers


- Compare realtime and average hashrates to ensure consistent performance.
- Keep rejection rate as low as possible to maximize earnings.
- Track electricity usage and costs regularly, as power efficiency is crucial for ROI.
- Use earnings vs. costs comparison to determine whether adjustments in hosting or settings are needed.



2. Iceriver AE3 - 2 GH/s.

Pool Settings

- The miner can be connected to up to three mining pools at once.
- Pools are listed in order of priority: if the first pool is unavailable, the miner will automatically switch to the second, and then to the third.
- Priority is set by simply arranging the pools in order; the top position is always the primary pool.

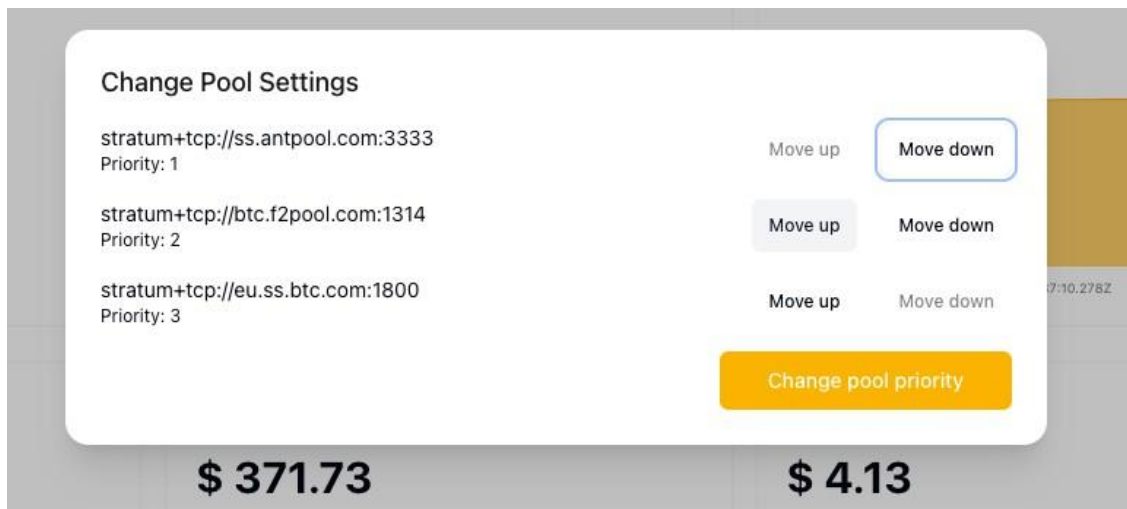

3. OneMiners platform v1.2 - Pool Settings

Earnings & Fees

Earnings

- Shows daily, monthly, and cumulative mining rewards in USD (or selected currency).
- Based on the miner's hashrate, accepted shares, and pool performance.

Fees

- Displays pool or platform fees deducted from earnings.
- Calculated on a daily and monthly basis for transparency.

Net Result

- The difference between gross earnings and fees represents your net mining income. Allows you to quickly assess profitability at a glance.

Yesterday earnings \$ 13.03	This month earnings \$ 371.73	Yesterday fees \$ 4.13	This month fees \$ 123.99
Current Power 3.66 KW	Yesterday Power 88.20 KW	Month power 2.64 MW	Price per KW \$ 0.047900

4. OneMiners platform - Earnings & Fees

Hardware Status

Network Status

- Indicates whether the miner is successfully connected to the selected pool(s).
- Any disconnection warnings should be addressed immediately to avoid downtime.

Fan Speed

- Displays percentage and RPM of each cooling fan.
- Proper airflow is critical for maintaining optimal temperature and preventing overheating.

Miner Temperature

- Reports the current operating temperature of each hash board.
- Keeping temperatures within recommended ranges ensures stability and extends hardware lifespan.

Hash-board Level Monitoring

- Provides detailed performance data per board, including hashrate and temperature.
- Useful for diagnosing imbalances or early signs of hardware degradation.

Realtime Hash-rate

OK

Network Status

OK

Fan Speed

OK

Miner temperature

OK

Pool ↓	Pool address ↓	Pool state ↓	Priority ↓	Accepted ↓	Rejected ↓
1	stratum+tcp://ss.antpool.com:3333	Connected	1	569043	1071
2	stratum+tcp://btc.f2pool.com:1314	Disconnected	2	0	0
3	stratum+tcp://eu.ss.btc.com:1800	Disconnected	3	0	0

Hash-board # ↓	30 minutes hash-rate ↓	TEMP 1 ↓	TEMP 2 ↓
1	88.22 TH/s	28	44
2	88.18 TH/s	28	44
3	74.88 TH/s	27	44

Fan # ↓	Speed (%) ↓	Speed (RPM) ↓
1	100 %	4844 RPM
2	100 %	4805 RPM

[Live Support](#)

4. OneMiners platform v1.2 - Hardware status

OneMiners Warranty

7-Year Extended Warranty

- All mining machines hosted within OneMiners data centers are eligible for up to **7 years of extended warranty coverage**.
- The warranty applies exclusively when the machines are operated inside officially managed facilities, ensuring professional maintenance, stable electricity, and optimal environmental conditions.

Circlehash Group Data Centers

- The same **7-year warranty** may also apply when machines are operated within data centers managed by trusted partners from the Circlehash Group.

Warranty Coverage

- Covers manufacturing defects, hardware malfunctions, and replacement of faulty components under normal operation.
- Requires that miners are used in compliance with official guidelines and maintained within the hosted environment.

Exclusions

- Machines operated outside OneMiners or Circlehash Group data centers are not eligible for extended warranty.
- Damage caused by unauthorized modifications, external tampering, or improper usage is not covered.

Claim Process

- To initiate a warranty claim, customers must contact [OneMiners support](#) with the machine's hosting details and service ID.
- Repairs or replacements will be processed through OneMiners' repair service team.

Wallet

Automatic Mining Balance

- From the very first moment your miner is installed and activated, it begins generating mining rewards.
- Even if no energy payments are preloaded into your wallet, mining continues.
- In such cases, the system automatically deducts energy costs and fees from the generated rewards.
- If funds are preloaded into the wallet in advance, earnings are credited without automatic deductions.
- You are able to change your wallet address in the wallet settings.

Action Buttons

↓

Unpaid **\$72.54** | Total balance **\$64 352.2**

Asset	Holdings	Estimated	
Bitcoin BTC	0.342006 BTC	\$38 574.12	Settings
Kaspa KAS	286 397 KAS	\$22 432.29	Settings
Dogecoin DOGE	6 355.58 DOGE	\$1 521.3	Settings
Litecoin LTC	7.790449 LTC	\$823.38	Settings
Handshake HNS	141 722.45 HNS	\$813.76	Settings
Alephium ALPH	705.6 ALPH	\$120.44	Settings
Radiant RXD	213 299.36 RXD	\$66.9	Settings
Energy & fees balance USDT	28.95 USDT	\$28.95	

[Deposit](#) | [Withdrawal](#) | [Exchange](#) | [Transactions](#)

AutoEnergy

If your energy wallet balance goes negative, mined coins will automatically convert to USDT to cover energy fees and keep your miners running without interruption. To avoid this, ensure your USDT wallet has enough funds for energy payments.

Wallet Settings

5. OneMiners Platform v1.2 - Wallet Section.

286 397 KAS

\$22 432.29

Wallet Settings

Choose from these wallet settings

Change payout address

Change payout frequency

705.6 ALPH

\$120.44

6. OneMiners Platform v1.2 - Changing your payout wallet address.

Withdrawal

- Navigate to: **Wallet > Withdrawal**
- Add a **crypto wallet address** or **bank account**.
- Select the **currency**, enter the **amount**, and confirm.
- Funds will be withdrawn quickly and securely to your chosen destination.

1. Click on "Withdrawals"

2. Choose your preferred destination

Asset	Holdings	Estimated
Bitcoin BTC	0.342006 BTC	\$38 574.12
Kaspa KAS	286 397 KAS	\$22 432.29
Dogecoin DOGE		
Litecoin LTC		
Handshake HNS		
Alephium ALPH	705.6 ALPH	\$120.44
Radiant RXD	213 299.36 RXD	\$66.9

7. OneMiners Platform v1.2 - Withdrawal process

Request withdrawal

Withdrawal will usually be processed within 24 hours. You will be able to track the status of your withdrawal in the Transactions tab. After the withdrawal is processed, you will also obtain a transaction hash, which you can use to track the status of your withdrawal on the blockchain.

Enter withdrawal amount

0,0420033 BTC

Address:
1ML43MW87cWd4YV7kCURTJUj5vuhEBDTzR

Preview withdrawal


By clicking the button above, you agree to our [Terms of Service](#) and [Privacy Policy](#). By continuing, you will create a withdrawal preview order, which will fix all fees for 2 minutes. You will then be able to confirm the withdrawal request on the next screen.

Asset	Holdings	Estimated
Bitcoin BTC		
Kaspa KAS		
Dogecoin DOGE		
Litecoin LTC		
Handshake HNS		
Alephium ALPH		
Radiant RXD		
Energy & fees balance USDT	28.95 USDT	\$28.95

8. OneMiners Platform v1.2 - Choose the currency and amount.

Exchange

- Navigate to: **Wallet > Exchange**
- Select the currencies you want to exchange.
- Option also available to **convert directly into Energy & Fees Funds** for smooth miner operation.
- Enter the desired amount and confirm to complete the exchange instantly.

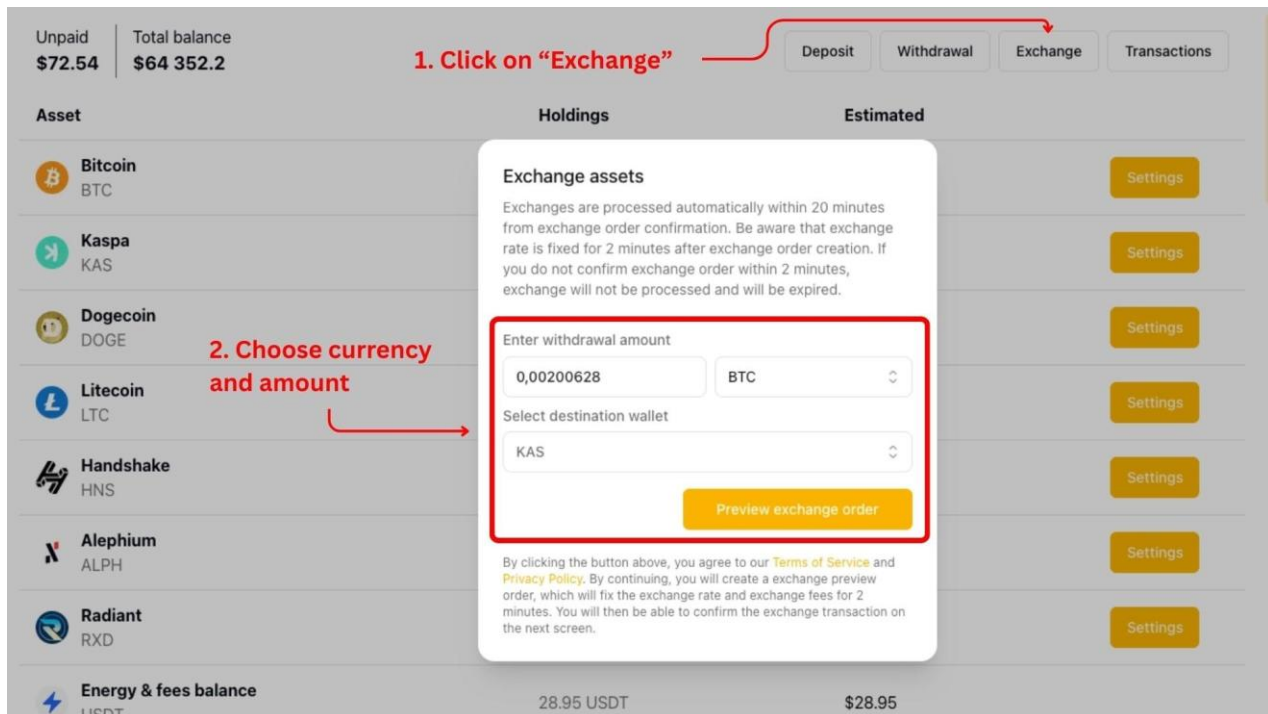

Unpaid \$72.54 Total balance \$64 352.2

1. Click on "Exchange"

Asset Holdings Estimated

Bitcoin BTC Settings

Kaspia KAS Settings

Dogecoin DOGE Settings

Litecoin LTC Settings

Handshake HNS Settings

Alephium ALPH Settings

Radiant RXD Settings

Energy & fees balance USDT 28.95 USDT \$28.95

2. Choose currency and amount

Exchange assets

Exchanges are processed automatically within 20 minutes from exchange order confirmation. Be aware that exchange rate is fixed for 2 minutes after exchange order creation. If you do not confirm exchange order within 2 minutes, exchange will not be processed and will be expired.

Enter withdrawal amount

0,00200628 BTC

Select destination wallet

KAS

Preview exchange order

By clicking the button above, you agree to our [Terms of Service](#) and [Privacy Policy](#). By continuing, you will create a exchange preview order, which will fix the exchange rate and exchange fees for 2 minutes. You will then be able to confirm the exchange transaction on the next screen.

9. OneMiners Platform v1.2 - Process of currency exchange in wallet.

AI Smart Mining

What is AI Smart Mining?


- AI Smart Mining is a feature that uses artificial intelligence to optimize your mining operations by selecting the most profitable pools and managing machines automatically.

How It Works

- Continuously analyses market conditions and pool performance.
- Redirects mining power to maximize profitability.
- Improves efficiency by avoiding less profitable pools.

Control on Dashboard

- You can easily **enable or disable AI Smart Mining** at any time directly from your **OneMiners dashboard**.

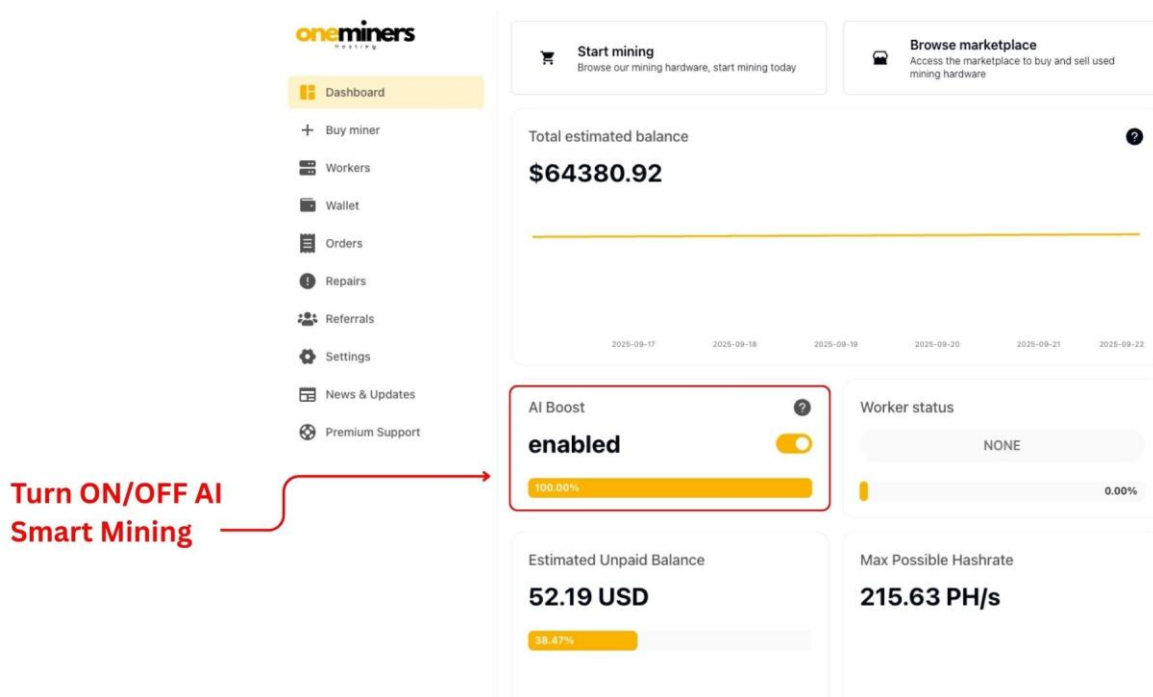

10. OneMiners Platform v1.2 - AI Smart Mining settings in dashboard.


OneMiners Smart App

What is the OneMiners Smart App?

The OneMiners Smart App is a mobile application that allows you to remotely monitor and manage your ASIC miners anytime, anywhere. Thanks to our white-label hosting platform provider CircleHash LLC, the app is available for free download on both the App Store and Google Play.

Key Features

- **Remote Control** – Start, stop, and adjust your miners directly from your phone.
- **Performance Monitoring** – View real-time hashrate, power consumption, and hardware status.
- **Wallet Access** – Easily manage balances, withdrawals, and transfers of mined cryptocurrencies.
- **User-Friendly Interface** – Simple design for both beginners and advanced users.

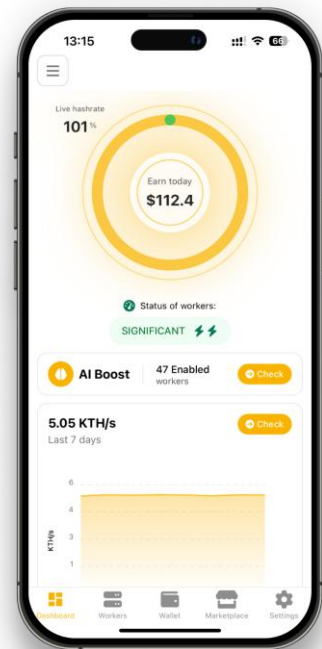

Availability

Download the OneMiners Smart App for free on iOS ([App Store](#)) and Android ([Google Play](#)).

Scan to Download

- iOS (App Store):



- Android (Google Play):



Daily Profitability Calculations (AsicProfit.com)

- Shows estimated daily earnings in USD and BTC.
- Includes calculation of ROI (Return on Investment) based on miner purchase price, hashrate, and electricity cost.
- Data shown is valid as of **2025/10/17**.
- *Disclaimer: Profitability depends on network difficulty and coin market price. Always confirm updated results before making financial decisions.*


Aleo (zkSNARK)
 Price: 0.24922 USD

Daily est. earnings (330.34 ALEO):
+79.06 USD (⚡ 3.26 USD)

Estimated ROI for 3 599.00 USD
1.49 month(s)


 Powered by AsicProfit®

11. Calculations of Daily Earnings & Estimated ROI - <https://www.asicprofit.com/>

Profitability

	Daily	Monthly	Yearly
Income	\$ 4.76	\$ 145.01	\$ 1 740.17
Electricity	\$ 3.12	\$ 94.96	\$ 1 139.58
Profit	\$ 1.64	\$ 50.05	\$ 600.59

12. Profitability & Energy costs with **1M** electricity rate of \$0.04 / kWh - <https://www.asicprofit.com/>

Additional Notes

Electricity Pricing

- Electricity is the largest ongoing expense for mining operations. Always negotiate the lowest possible kWh rate with your hosting provider or local supplier. - OneMiners Nigeria hosting for \$0.04 / kWh.
- Consider hosting options in countries with competitive electricity pricing to maximize ROI.
- Visit OneMiners Hosting site: <https://oneminers.com/pages/hosting-centers>

Hosting with OneMiners

- OneMiners offers professional hosting services with locations across the USA, Europe, and the Middle East.
- Hosting ensures stable power supply, professional maintenance, and remote monitoring of your miners. Customers using OneMiners hosting benefit from optimized electricity pricing and dedicated support.

Maintenance & Repairs

- Regular hardware maintenance is essential to maximize miner lifespan.
- Dust removal, fan checks, and thermal monitoring should be carried out regularly.
- For professional repair services, please contact our repair team directly.

Platform Monitoring

- The OneMiners platform provides real-time statistics, profitability calculators, and hosting ROI tools.
- Users should frequently check miner status, temperature, and earnings to ensure stable operation.

Disclaimer

- All profitability and ROI calculations shown in this manual are valid only as of the indicated date.
- Market conditions, electricity prices, and coin values fluctuate frequently; results should always be verified before making investment decisions.
- Screenshots from the OneMiners platform are provided for reference only; actual values may differ depending on miner type, configuration, and hosting environment.

Contact & Support

For sales, technical assistance, and hosting inquiries, our team is available 24/7.

- **WhatsApp Support (24/7):** +1 305 867 6143
- **Repairs & Service:** +420 739 482 744
- **General Support (USA):** +1 607 9009 004
- **Emails:**
 - Sales: sales@oneminers.com
 - Business: business@oneminers.com
 - Service: service@oneminers.com
 - Payments: payinquire@oneminers.com

Mailing Addresses:

- **United States – USA:** 701 Tillery St 12, Austin, 78702 Texas
- **Europe – Czechia:** Rostovska 260/2b, Prague, 110 00
- **Middle East – Dubai:** Sheikh Rashed Bin Saeed Al Maktoum Road, C1 Building, Ajman, UAE

Please visit our Contact page for more information - <https://oneminers.com/pages/contact>

Official email: info@oneminers.com

Telephone: +1 607 9009 004

Scan this QR Code for any link you are looking for:

