BITMAIN · ANTMINER

Antminer X9
1 MH/s

Air-cooled Monero miner · RandomX · PSU included



COIN · ALGORITHM
Monero · RandomX

COOLING
Air (fans)

POWER
220–240 V · PSU included

RELEASE
July 2026 batch

Product Manual

Setup, operation, maintenance and OneMiners hosting guide

Version 1.2
Updated November 2026
Information checked 7 Nov 2026

Contains manufacturer documentation © Bitmain Technologies Inc., reproduced for customer reference.

About this manual

This manual covers the **Bitmain Antminer X9** (production label "ANTMINER XMR Miner X9"), rated at **1 MH/s** on RandomX for Monero (XMR).

No Bitmain X9 manual or verified Bitmain specification sheet was available for this edition. Specifications are from the OneMiners listing and ASIC Miner Value; setup follows the standard Antminer procedure (IP Reporter, web dashboard, pools). Check each step against your unit.

Each section that reproduces or summarises manufacturer content is marked with a **Source** tag. Values that sources disagree on, or that no source confirms, are marked **Needs verification** and listed in section 1.4. Chapters 8 to 12 cover the OneMiners platform, hosting, warranty and wallet, and are marked **OneMiners**.

Before you start

CHECK	POWER	ROOM	PAYOUT
Label says X9	**220–240 V · ≈ 11 A**	**0–40 °C**	**Monero wallet**
RandomX, not an X5 or other model.	Check the cord rating (1.4).	Ventilated, away from people (76 dB).	Plus a Windows PC for IP Reporter.

How notices are used

DANGER
Risk of electric shock, fire or injury. Do not continue until the condition is met.

CAUTION
Risk of damage to the miner, lost earnings or loss of data. Read before acting.

NOTE
Useful background, limits of a specification, or where to check further.

ONEMINERS
Applies to miners hosted in a OneMiners data center.

Copyright and disclaimer

© OneMiners, 2026. This manual combines documentation published by the manufacturer, Bitmain Technologies Inc., and other cited sources with supplementary material written by OneMiners (platform, hosting, warranty and wallet chapters). Manufacturer content remains the property of its owner and is reproduced or summarised here for the convenience of OneMiners customers. OneMiners claims no ownership of it. All product names and trademarks belong to their respective owners.

Specifications are typical values and may change without notice. Always confirm against the label on your unit and the latest manufacturer documentation. Information about profitability, hosting prices and platform features is for guidance only and is not financial advice. OneMiners' supplementary chapters may not be copied or redistributed without written permission.

Contents

01	**Product Overview** Specifications, availability and open questions	4
02	**Safety and Installation Requirements** Electrical, climate, site and airflow	6
03	**Initial Setup** Inspection, power, IP address and dashboard login	7
04	**Mining Configuration** Pools, worker names and saving settings	8
05	**Monitoring Performance** Dashboard values and what normal looks like	9
06	**Firmware and Maintenance** Firmware, password, reset and cleaning	10
07	**Troubleshooting** Power, network, pools, hashrate and temperature	11
08	**OneMiners Platform Guide** Miner details, pool settings, earnings and hardware status	12
09	**OneMiners Hosting and Warranty** Hosting service, warranty terms, exclusions and support	14
10	**Wallet and Mining Rewards** Mining balance, payout address, withdrawals and exchange	15
11	**Additional OneMiners Features** AI Smart Mining, mobile app and profitability tools	17
12	**Official Resources and Support** Links, contacts, sources and revision history	18

01 CHAPTER Product Overview

The Antminer X9 is Bitmain's RandomX ASIC for Monero, listed at 1 MH/s and 2,472 W. It is air-cooled with a built-in power supply.

AVAILABILITY

Production status. The OneMiners product page states that Bitmain has halted X9 production and that no release date is confirmed. Orders may be substituted or delayed.

Documentation. OneMiners lists no manual, firmware or IP Reporter file for the X9 yet. This edition will be updated when Bitmain publishes official documentation.



Figure 1-1 Antminer X9 1 MH/s. Image: OneMiners product photo.

1.1 Key figures

1 MH/s	2,472 W	2.47 J/kH
Rated hashrate	Power on wall	Efficiency

1.2 Specifications

ITEM	VALUE
PRODUCT	
Model	**Antminer X9 (XMR Miner X9)**
Algorithm / coins	**RandomX · XMR (ZEPH also listed)** [1]
Hashrate	**1 MH/s (1,000 kH/s)**
Power on wall	**2,472 W**
Efficiency	**2.47 J/kH**
POWER	
Input voltage	**220–240 V AC** [2]

ITEM	VALUE
HARDWARE	
Network	**Ethernet**
Size (L×W×H)	**361 × 219 × 293 mm**
Weight	**Needs verification**
Noise	**76 dB**
ENVIRONMENT	
Operating temperature	**0–40 °C (OneMiners)**
Humidity	**Needs verification**

ITEM	VALUE
Current	**About 11.2 A at 220 V (calculated)**
Power cord	**C13 (OneMiners listing) · Needs verification**
PSU	**Included**

[1] Check that a coin is still mineable on its network before pointing the miner at it. [2] ASIC Miner Value lists 220–277 V; use 220–240 V until Bitmain confirms.

SOURCE OneMiners product page (checked 7 Nov 2026); ASIC Miner Value, Antminer X9 (1M).

1.3 Hardware

Power supply	Built in, included with the miner.
Controller	ETH port · **IP Report** button · **Reset** button · status lights (standard Antminer layout).
Cooling	Fans; front-to-back airflow.

SOURCE OneMiners product page; standard Antminer layout.

1.4 Values that need verification

These values conflict between sources or aren't confirmed by the manufacturer. Check the label on your unit, and ask OneMiners support before planning power or cooling around them.

ITEM	WHAT THE SOURCES SAY	USED IN THIS MANUAL
Power cord	OneMiners lists C13. C13 cords are commonly rated 10 A, but the X9 draws about 11.2 A at 220 V.	**Needs verification**: use a cord and inlet rated for the current
Weight	OneMiners 21.5 kg · ASIC Miner Value 17.5 kg	**Needs verification**
Input voltage	OneMiners 220–240 V · ASIC Miner Value 220–277 V	220–240 V
Release and availability	ASIC Miner Value: Aug 2026, delayed · OneMiners: July 2026 batch, production halted	Ask OneMiners sales
Efficiency unit	Parts of the OneMiners page write J/TH	J/kH is correct (2,472 W ÷ 1,000 kH/s)

CHAPTER 02

Safety and Installation Requirements

The X9 draws about 2.5 kW from a single input and produces loud, hot exhaust air. Plan the circuit and the room before switching it on.

2.1 Safety warnings

DANGER · ELECTRICAL

- Connect to an **earthed** socket near the equipment and easy to reach.
- Use only 220–240 V AC. Wrong input voltage may damage the server.
- The X9 draws about 11.2 A at 220 V. Use a power cord, inlet and circuit rated for at least that current.

CAUTION · EQUIPMENT

- Don't open the case or remove screws; unauthorised disassembly can void the warranty.
- Keep the miner away from water and condensing humidity.

2.2 Electrical requirements

Input	**220–240 V AC**
Typical load	**2,472 W**
Current	**About 11.2 A at 220 V · 10.3 A at 240 V (calculated)**
Power cord	**Rated for the current above (see 1.4)**

Use earthed circuits sized by a licensed electrician to local code. Don't use household extension leads or multi-plugs.

2.3 Climate and site

CONDITION	REQUIREMENT
Operating temperature	0–40 °C
Humidity	Non-condensing; keep below 65% RH where possible
Noise	76 dB

- Keep intake and exhaust clear and don't let hot exhaust air flow back into the intake.
- At 76 dB, the X9 isn't suitable for living or office spaces.
- Avoid dust, salt air and corrosive gases; clean more often in dusty sites.

SOURCE OneMiners product page; standard Antminer safety guidance. Bitmain hasn't published X9-specific site requirements that we could verify.

03 CHAPTER Initial Setup

These steps take a new X9 from the box to its management interface. If your miner is hosted by OneMiners, our team does this for you; skip to Chapter 8.

3.1 Unboxing and connecting

- Check the carton for damage and confirm the label shows **X9**. Check the fans spin freely and keep the packing.

1. **Network**
   Connect an Ethernet cable to the **ETH** port. DHCP assigns an IP address automatically.
2. **Power**
   Connect the power cord and switch on the supply. The fans spin up during start-up.

3.2 Finding the miner's IP address

1. Download `IPReporter.zip` from shop.bitmain.com/support/download (Tools section) or the OneMiners Manuals & Firmware Library. It runs on Windows only.
2. Extract it, right-click `IPReporter.exe` and choose **Run as administrator**.
3. Choose **Shelf, Step, Position** to mark locations in a farm, or **Default** for a single server. Click **Start**.
4. On the control panel, press and hold **IP Report** until the miner beeps (about 5 seconds). The IP address appears on your computer.

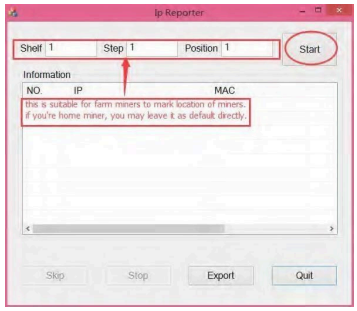


Figure 3-1 IP Reporter. © Bitmain.

3.3 Logging in and network settings

1. Enter the IP address in a web browser on the same network. Log in with `root` / `root`, then change the password.
2. Optional static IP: open **IP Setting**, set **Protocol** to **Static**, enter IP, mask, gateway and DNS, then **Save**.

Dashboard menu map

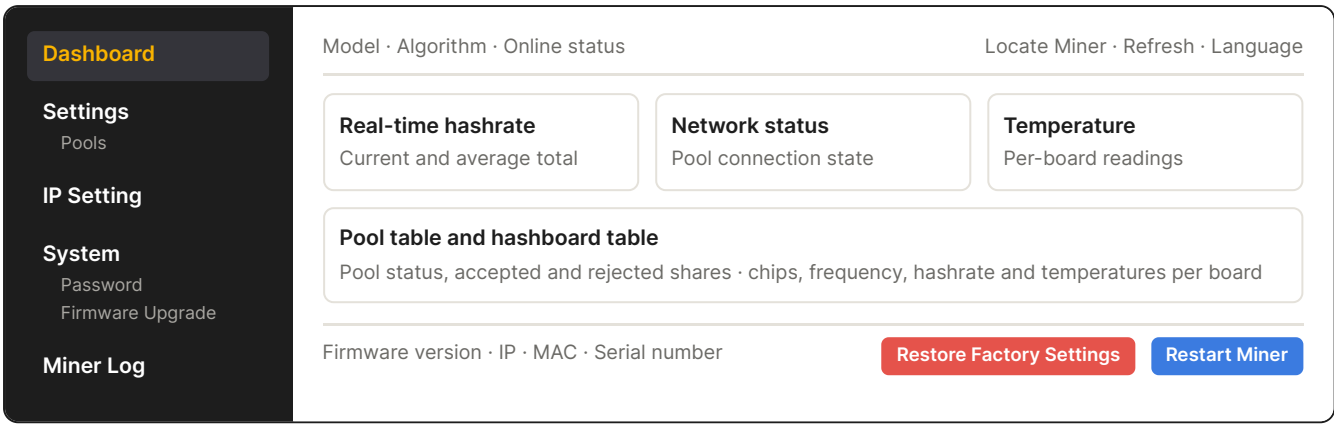


Illustration of the Antminer web interface layout, not a screenshot. Labels can differ between models and firmware releases.

SOURCE Standard Antminer procedure from Bitmain user guides (IP Reporter, dashboard, pools, administration). Not confirmed on X9 firmware.

04 CHAPTER Mining Configuration

The X9 mines RandomX coins, mainly Monero (XMR). You need a Monero pool and a Monero wallet address.

4.1 Setting up pools

1. Open **Settings** › **Pools**.
2. Enter up to three pools in priority order.
3. Click **Save**. The miner connects to Pool 1.

FIELD	WHAT TO ENTER
Pool / mining address	The pool's stratum address, in the format `stratum+tcp://host:port`. Copy it from your pool's "Connect" or "Getting started" page.
Worker / user	Your pool account or wallet address plus a worker name, usually `account.worker`, for example `4ABC…XYZ.x9-01`.
Password	Optional. Most pools accept any value, such as `x`.

COIN AND POOL
The X9 mines RandomX coins, mainly Monero (XMR). Monero pools usually take your **XMR wallet address** as the user, optionally followed by a worker name. Check the exact format on your pool.

CAUTION
Use only pool addresses from the pool's official website, and always add at least one backup pool. A mistyped address mines for nobody.

ONEMINERS
Hosted miners are configured from the OneMiners platform rather than the miner's own dashboard. To change pools, use **Pool Settings** in your account (see 8.2).

SOURCE Standard Antminer procedure from Bitmain user guides (IP Reporter, dashboard, pools, administration). Not confirmed on X9 firmware.

05 CHAPTER Monitoring Performance

Judge performance by the average hashrate after the miner has run for some time.

5.1 What "normal" looks like

≈ 1,000 kH/s	≈ 2,472 W	< 1 %
Average hashrate	Wall power	Pool rejection rate

Bitmain tolerances for the X9 weren't available; expect values close to the rated figures.

5.2 What to watch

VALUE	MEANING
Average hashrate	The most reliable measure of performance. The real-time figure moves with every share.
Board temperatures	Board temperatures should stay stable. Rising values point to dust, fans or room temperature.
Fan speed	Every fan should report a speed. A stopped fan raises temperatures and stops mining.
Pool status	Active pool, accepted and rejected shares. Rejection below 1% is normal.

06 CHAPTER Firmware and Maintenance

Keep the firmware current and the airflow clean. Most problems on air-cooled miners trace back to dust, fans or room temperature.

6.1 Upgrading firmware

DANGER · KEEP POWER ON
Keep the server powered throughout the upgrade.

USE THE RIGHT FILE
Only install firmware Bitmain publishes for the **Antminer X9**, from shop.bitmain.com/support/download or the OneMiners Manuals & Firmware Library. Never flash firmware for another model.

1. Open `System` › `Firmware Upgrade` and leave **Keep settings** selected.
2. Choose the file, click **Update**, and restart when it finishes.

6.2 Password and factory reset

- Password: `System` › `Password`.
- Reset: with the miner running for at least 5 minutes, hold **Reset** on the control panel for 10 seconds. All settings are cleared.

SOURCE Standard Antminer procedure from Bitmain user guides (IP Reporter, dashboard, pools, administration). Not confirmed on X9 firmware.

6.3 Preventive maintenance

WHEN	TASK
Daily / remotely	Check average hashrate, board temperatures, fan speeds and pool status.
Monthly	Check room temperature and humidity against 2.3. Look for dust on fan guards.
Every 1–3 months	Switch off and unplug, then clean fans and heat sinks with dry compressed air.
Regularly	Check power cords and plugs for heat marks. Check for new firmware.

Intervals are OneMiners recommendations. Clean more often in dusty sites.

07 CHAPTER Troubleshooting

Start with the symptom table. Hosted customers: don't attempt repairs yourself; contact OneMiners service.

SYMPTOM	CHECK
Miner doesn't power on	Check the supply is 220–240 V and the cord is fully seated and rated for the current.
No network / IP not found	Check the cable, switch port and DHCP. Run IP Reporter as administrator and hold **IP Report** until it beeps.
Pool won't connect	Re-check the pool address and port, the worker name, gateway and DNS. Make sure the pool port isn't blocked by a firewall.
Low or unstable hashrate	Compare the average hashrate with 5.1. Check board temperatures, fans and dust. Update the firmware.
Overheating	Check the room is within 0–40 °C, fans are running and intake and exhaust are clear. Clean, then restart.
Smell, unusual sound or smoke	Switch off immediately and contact service.

SOURCE Based on Bitmain documentation cited in Chapters 2–6.

ONEMINERS
For a hosted miner, send the symptom and your miner's service ID to **service@oneminers.com** or WhatsApp **+1 305 867 6143**. Repairs under warranty are handled on site by our repair team.

08 CHAPTER OneMiners Platform Guide

Miners hosted by OneMiners are monitored and managed from your account at app.oneminers.com or the OneMiners mobile app. Screens in this chapter are from OneMiners platform v1.2 and show example values from other miners, not an X9.

8.1 Miner details

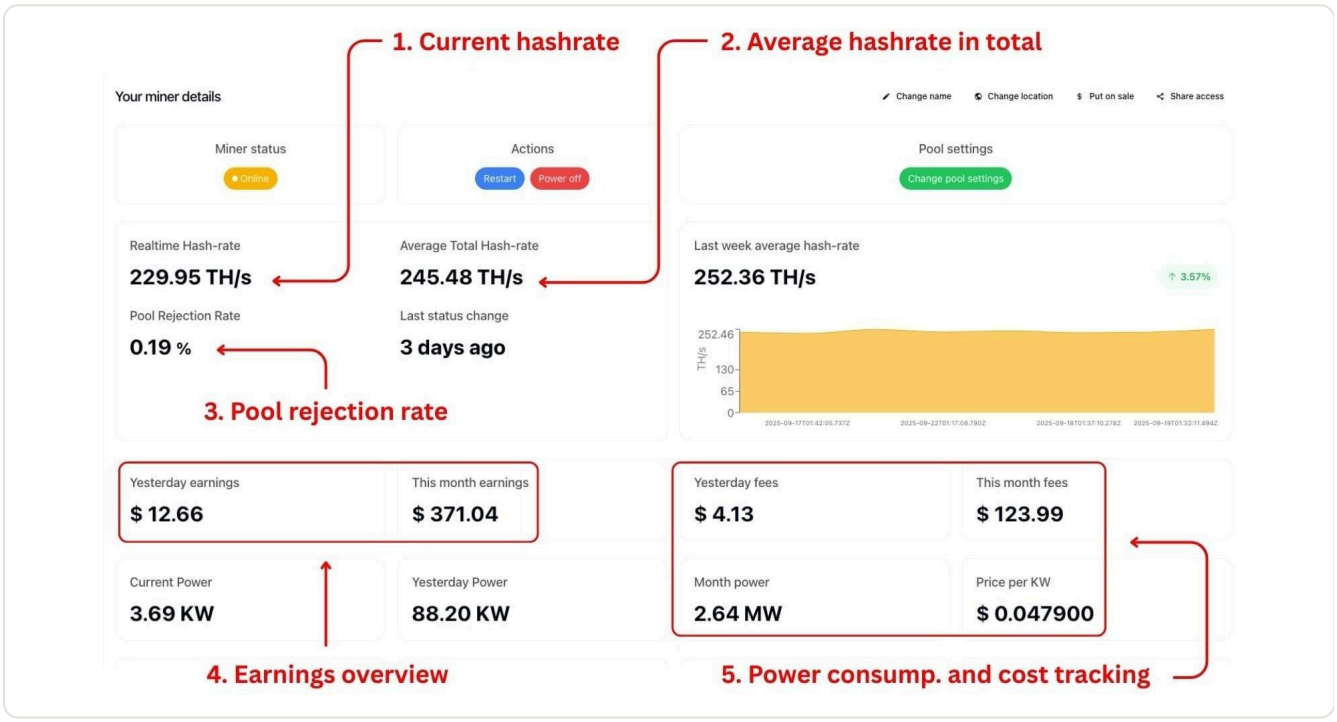


Figure 8-1 Miner details on OneMiners platform v1.2 (example values).

1 · Current hashrate	Real-time hashrate (for the X9, in kH/s or MH/s). It moves with network stability, hardware and pool communication.
2 · Average hashrate	Average over a longer period (typically 24 h). The most reliable measure of performance; for the X9, expect about 1,000 kH/s (1 MH/s).
3 · Pool rejection rate	Share of submitted shares the pool rejected. Below 1% is healthy.
4 · Earnings overview	Estimated earnings for the selected period, based on accepted shares.
5 · Power and cost	Real-time and historical energy use (kW) and its cost at your configured price per kWh.

8.2 Pool settings

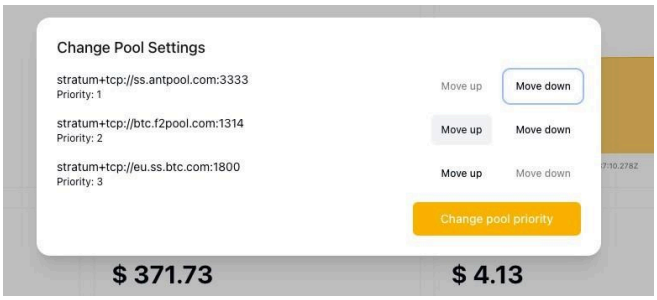


Figure 8-2 Change Pool Settings.

- Up to three pools can be connected.
- Pools are listed in priority order. If the first is unavailable, the miner switches to the second, then the third.
- Use **Move up** / **Move down** to set the order, then **Change pool priority** to apply it.

8.3 Earnings and fees



Figure 8-3 Earnings, fees, power and price per kWh (example values).

- **Earnings:** daily, monthly and cumulative mining rewards in USD or your selected currency.
- **Fees:** pool and platform fees deducted from earnings, shown daily and monthly.
- **Net result:** earnings minus fees, which is your net mining income.

8.4 Hardware status

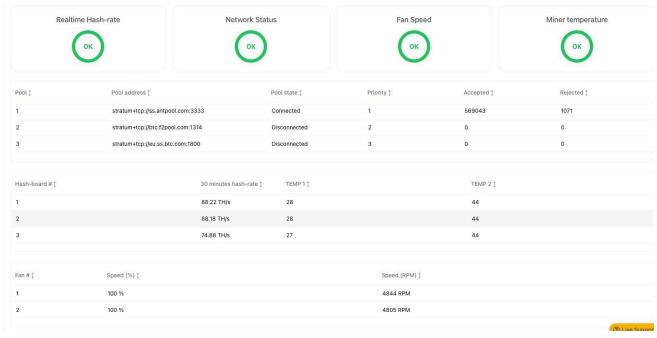


Figure 8-4 Hardware status (example from an air-cooled miner).

- **Network status:** whether the miner is connected to its pools. Address disconnections immediately.
- **Miner temperature** and **hashboard table:** per-board hashrate and temperatures. Useful for spotting an underperforming board early.

> **AIR-COOLED UNITS**
> Fan speed is shown per fan. A slow or stopped fan raises temperatures and stops mining, so act on fan alerts quickly.

ONEMINERS OneMiners platform v1.2. Confirm layout against the current version of your account.

CHAPTER 09

OneMiners Hosting and Warranty

OneMiners hosts customer-owned miners in its data centers, providing power, cooling, racking and monitoring. Terms below reflect OneMiners' published pages as checked on 7 November 2026.

9.1 Hosting

- Hosting is offered across 17 data centers worldwide, **from 3.6¢ per kWh** at the time of writing.
- Locations include Nigeria, Ethiopia, Dubai, the USA (Texas, Houston, Georgia, South Carolina, Kansas and a no-service-fee option), Finland, Norway, Canada, Brazil, Czechia, China and Paraguay.
- Hosted orders are deployed turnkey; OneMiners racks, connects and monitors the miner.
- Air-cooled miners like the X9 are accepted at most sites. Ask sales which locations currently host the X9.

Current prices and locations: oneminers.com/pages/hosting-centers.

9.2 Warranty

HOSTED WITH ONEMINERS

7-year full warranty for miners hosted in the USA, Dubai, Norway, Finland, Ethiopia, Nigeria and China.

- Free on-site repairs
- No-cost replacement of power supplies and cables
- No labour or diagnostic fees

SHIPPED TO YOU

Standard 12-month warranty, unless the manufacturer specifies otherwise.

- Free repair of manufacturing defects
- Replacement of defective units when necessary
- Valid only when the miner is operated according to official instructions

All customers during warranty

Remote diagnostics, real-time monitoring, 24/7 technical support, and firmware upgrades and maintenance.

Exclusions

The warranty may be voided by damage from misuse, unauthorised modifications or non-compliant operation. For the X9, this includes damage from running outside 0–40 °C or 220–240 V, undersized power cords, blocked airflow, firmware for other models, or opening the unit.

Out of warranty

Repairs typically cost **US$80–220**, depending on the fault and parts required.

Making a claim

Contact OneMiners support with your miner's hosting details and service ID through oneminers.com/pages/contact or **service@oneminers.com**.

ONEMINERS OneMiners Warranty Policy, oneminers.com/pages/warranty-policy . The policy page prevails if it differs from this summary.

10 CHAPTER Wallet and Mining Rewards

Rewards from a hosted miner are credited to your OneMiners wallet, where you can withdraw them or exchange between currencies.

10.1 Automatic mining balance

- The miner starts generating rewards as soon as it is installed and activated.
- If no energy payment has been preloaded, mining continues and energy costs and fees are deducted automatically from the rewards.
- If funds are preloaded in advance, earnings are credited without automatic deductions.
- You can change your payout wallet address in the wallet settings.

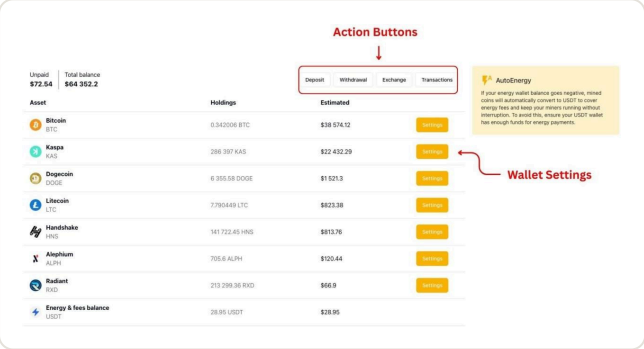


Figure 10-1 Wallet section.

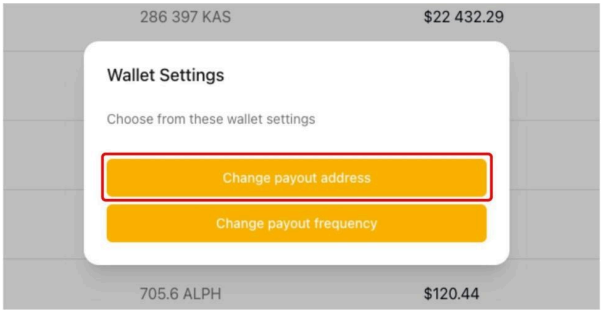


Figure 10-2 Changing the payout address.

10.2 Withdrawals

1. Go to **Wallet** › **Withdrawal**.
2. Add a crypto wallet address or a bank account.
3. Select the currency, enter the amount and confirm.

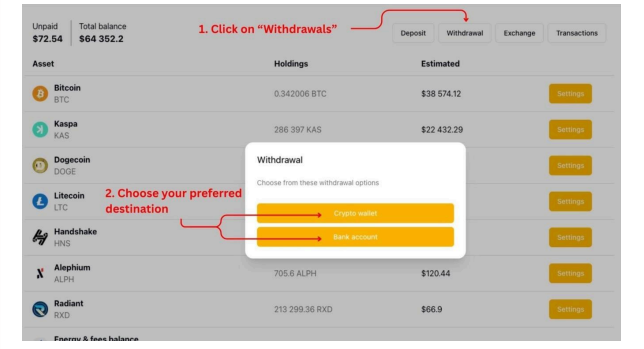


Figure 10-3 Choosing a withdrawal destination.

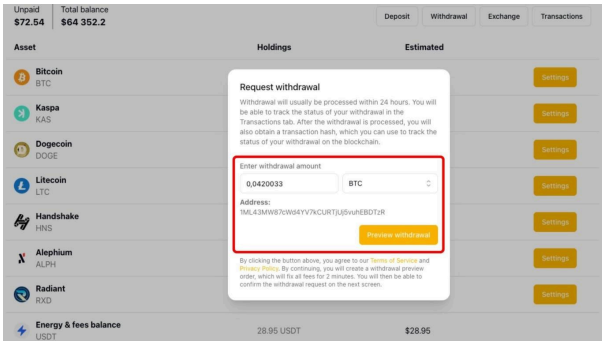


Figure 10-4 Choosing currency and amount.

10.3 Exchange

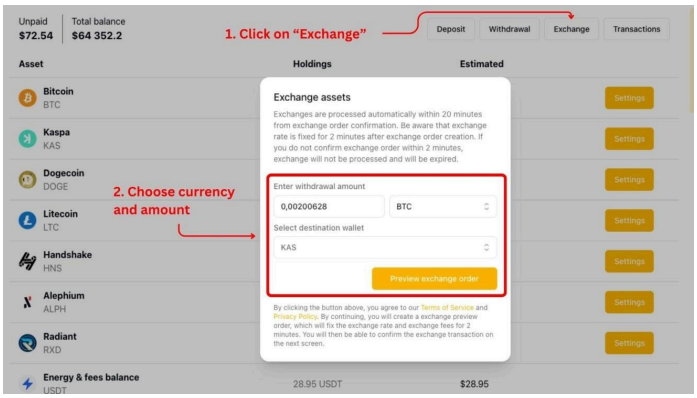


Figure 10-5 Exchanging currencies.

1. Go to **Wallet** › **Exchange**.
2. Select the currencies to exchange. You can also convert directly into **Energy & Fees** funds to keep the miner running.
3. Enter the amount and confirm.

> **BEFORE YOU WITHDRAW**
> Double-check addresses and networks. Crypto transfers to a wrong address usually can't be reversed. Keep enough Energy & Fees balance to avoid deductions from your rewards.

ONEMINERS OneMiners platform v1.2.

CHAPTER 11

Additional OneMiners Features

Optional tools in your OneMiners account. Availability and settings can change; check your dashboard for what is active on your account.

11.1 AI Smart Mining

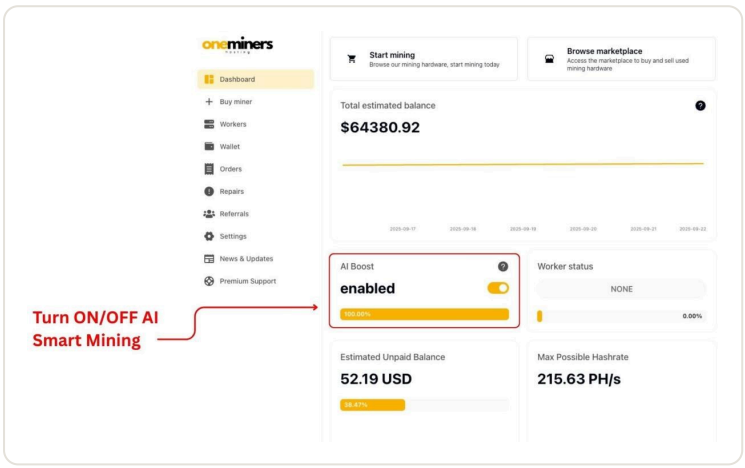


Figure 11-1 AI Boost toggle on the dashboard (platform v1.2).

AI Smart Mining analyses market conditions and pool performance and can switch your miner to the pools it calculates are most profitable.

- Turn it on or off with the **AI Boost** toggle on your dashboard.
- Your hardware keeps mining to your own account and wallet.


Results depend on hardware and market conditions and aren't guaranteed. More information: oneminers.com/pages/ai-smart-mining.

11.2 OneMiners mobile app

Monitor and manage your miners from your phone: start and stop miners, view hashrate, power use and hardware status, and manage balances and withdrawals. The app is built on the CircleHash white-label hosting platform and is free.

App Store

Google Play

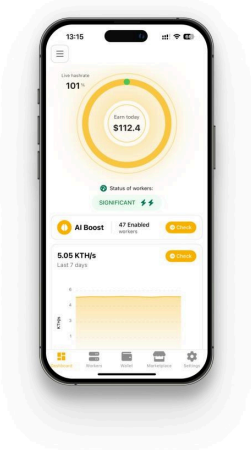

11.3 Profitability tools

Mining income from the X9 depends on the XMR price, network difficulty and your electricity cost, all of which change daily. For current estimates, use the live tools rather than figures printed in a manual:

- Miner profitability table: oneminers.com/pages/miner-profitability

For the X9, use 1 MH/s and 2,472 W with your own price per kWh. Estimates aren't financial advice.

12 CHAPTER Official Resources and Support

12.1 Resources

BITMAIN
Firmware and IP Reporter
shop.bitmain.com/support/download

BITMAIN
Support centre
support.bitmain.com

ONEMINERS
Manuals & Firmware Library
oneminers.com/pages/manuals-and-firmware

ONEMINERS
Product page
oneminers.com/products/antminer-x9-1-mh-s

ONEMINERS
Warranty policy
oneminers.com/pages/warranty-policy

ONEMINERS
Hosting locations
oneminers.com/pages/hosting-centers

12.2 Contact OneMiners

SUPPORT, 24/7

+1 305 867 6143

WhatsApp

+1 607 9009 004 · Sales, USA

service@oneminers.com · Service and repairs
sales@oneminers.com · Sales
payinquire@oneminers.com · Payments

Telegram: t.me/oneminers_hosting

ADDRESS

CIRCLEHASH LLC
701 Tillery Street
Austin, Texas 78702, USA

Contact page

Manuals library

12.3 Sources used for this version

1. OneMiners product pages, Antminer X9 1 MH/s and July 2026 batch: specifications, plug, availability notice.
2. ASIC Miner Value, Antminer X9 (1M): release, voltage, weight, noise.
3. D-Central, Antminer XMR Miner X9 reference: production label; note that X5 data must not be applied to the X9.
4. Bitmain user guides for current Antminer servers: IP Reporter, dashboard, pools, administration.
5. OneMiners: product page, Warranty Policy, hosting pages, AI Smart Mining page, Media Kit, site contact details. All checked 7 November 2026.

12.4 Revision history

VERSION	DATE	CHANGES
V1.2	Nov 2026	Rewritten for the OneMiners media-kit template. Specifications with conflicts listed in 1.4, availability notice, power-cord current warning, standard Antminer setup, Monero pool guidance. Current warranty, hosting and contact details.
V1.1	—	Version published on the OneMiners library. Not reviewed for this revision.