GOLDSHELL

# SC5 Pro II
# 14 TH/s

Air-cooled ASIC miner



COIN · ALGORITHM
**Siacoin · Blake2b-Sia**

COOLING
**Air (fans)**

POWER
**170–300 V**

RELEASED
**Jan 2026**

## Product Manual

Setup, operation, maintenance and OneMiners hosting guide

**Version 1.0**
First edition, November 2026
Information checked 7 Nov 2026

Contains manufacturer documentation © Goldshell, summarised for customer reference.

# About this manual

This manual covers the **Goldshell SC5 Pro II**, rated at **14 TH/s** and **3,300 W**.

Each section that reproduces or summarises manufacturer content is marked with a **Source** tag. Values that sources disagree on, or that no source confirms, are marked **Needs verification** and listed in section 1.4. Chapters 8 to 12 cover the OneMiners platform, hosting, warranty and wallet, and are marked **OneMiners**.

## Before you start

| CHECK | POWER | ROOM | NETWORK |
|---|---|---|---|
| **Label says SC5 Pro II** | **170–300 V** | **5–35 °C** | **RJ45 + DHCP** |
| Check the version on the label. | About about 15 A at 220 V (calculated). | Ventilated, away from people (55 dB). | A browser for find.goldshell.com. |

## How notices are used

**DANGER**
Risk of electric shock, fire or injury. Do not continue until the condition is met.

**CAUTION**
Risk of damage to the miner, lost earnings or loss of data. Read before acting.

**NOTE**
Useful background, limits of a specification, or where to check further.

**ONEMINERS**
Applies to miners hosted in a OneMiners data center.

## Copyright and disclaimer

© OneMiners, 2026. This manual combines documentation published by the manufacturer, Goldshell, and other cited sources with supplementary material written by OneMiners (platform, hosting, warranty and wallet chapters). Manufacturer content remains the property of its owner and is reproduced or summarised here for the convenience of OneMiners customers. OneMiners claims no ownership of it. All product names and trademarks belong to their respective owners.

Specifications are typical values and may change without notice. Always confirm against the label on your unit and the latest manufacturer documentation. Information about profitability, hosting prices and platform features is for guidance only and is not financial advice. OneMiners' supplementary chapters may not be copied or redistributed without written permission.

# Contents


| | | |
|---|---|---|
| 01 | **Product Overview**<br>Specifications, versions and open questions | 4 |
| 02 | **Safety and Installation Requirements**<br>Electrical, climate, site and airflow | 5 |
| 03 | **Initial Setup**<br>Inspection, power, IP address and dashboard login | 6 |
| 04 | **Mining Configuration**<br>Pools, worker names and saving settings | 7 |
| 05 | **Monitoring Performance**<br>Dashboard values and what normal looks like | 8 |
| 06 | **Firmware and Maintenance**<br>Firmware, password, reset and cleaning | 9 |
| 07 | **Troubleshooting**<br>Power, network, pools, hashrate and temperature | 9 |
| 08 | **OneMiners Platform Guide**<br>Miner details, pool settings, earnings and hardware status | 11 |
| 09 | **OneMiners Hosting and Warranty**<br>Hosting service, warranty terms, exclusions and support | 13 |
| 10 | **Wallet and Mining Rewards**<br>Mining balance, payout address, withdrawals and exchange | 14 |
| 11 | **Additional OneMiners Features**<br>AI Smart Mining, mobile app and profitability tools | 16 |
| 12 | **Official Resources and Support**<br>Links, contacts, sources and revision history | 17 |

CHAPTER 01

# Product Overview

The Goldshell SC5 Pro II is an air-cooled miner using Goldshell's standard web interface.

**COIN AND ALGORITHM**

Goldshell and calculators: Siacoin (SC), Blake2b-Sia · OneMiners lists BTCB2. Use a pool for the coin you intend to mine.



**Figure 1-1** Goldshell SC5 Pro II 14 TH/s. Image: OneMiners product photo.

## 1.1 Key figures

| 14 TH/s | 3,300 W | 236 J/TH |
|---|---|---|
| Typical hashrate | Power on wall | Efficiency |

## 1.2 Specifications

| ITEM | VALUE |
|---|---|
| **PRODUCT** | |
| Model / version | **Goldshell SC5 Pro II** |
| Algorithm / coins | **Blake2b-Sia · SC (Siacoin)** |
| Hashrate | **14 TH/s** |
| Power on wall | **3,300 W** |
| Efficiency | **236 J/TH** |
| **POWER** | |
| Input | **170–300 V AC (OneMiners)** |
| Current | **about 15 A at 220 V (calculated)** |
| Power cord | **IEC C19 (OneMiners)** |

| ITEM | VALUE |
|---|---|
| **HARDWARE** | |
| Network | **Ethernet** |
| Size (L×W×H) | **370 × 305 × 450 mm (ASIC Miner Value)** |
| Weight | **13.1 kg** |
| Noise | **55 dB** |
| **ENVIRONMENT** | |
| Operating temperature | **5–35 °C** |
| Humidity | **10–65% RH (ASIC Miner Value)** |

SOURCE ASIC Miner Value, Goldshell SC5 Pro II; OneMiners product page.

## 1.3 Hardware

| | |
|---|---|
| **Power** | Built-in supply; C19 inlet (OneMiners). |
| **Front panel** | **IP** button and status lights. |
| **Network** | Ethernet. |

SOURCE Goldshell product information and help centre.

## 1.4 Values that need verification

These values conflict between sources or aren't confirmed by the manufacturer. Check the label on your unit, and ask OneMiners support before planning power or cooling around them.

| ITEM | WHAT THE SOURCES SAY | USED IN THIS MANUAL |
|---|---|---|
| **Coin listed** | Goldshell and calculators: Siacoin (SC), Blake2b-Sia · OneMiners lists BTCB2 | **Needs verification**: ask OneMiners which coin hosted units mine |
| **Manufacturer documentation** | D-Central found no Goldshell page, manual or firmware for an "SC5 Pro II" | **Needs verification**: confirm the model on the label |
| **Input voltage** | Only the OneMiners listing (170–300 V) | Use 220–240 V |
| **Photo in library list** | The SC5 Pro II row links to an SC6 SE image | Product-page photo used instead |

# 02 CHAPTER Safety and Installation Requirements

The SC5 Pro II draws about 3.3 kW and produces loud, hot exhaust air. Plan the circuit and the room before switching it on.

## 2.1 Safety warnings

**DANGER · ELECTRICAL**

- Connect to an **earthed** outlet near the equipment and easy to reach.
- Use only 170–300 V AC (OneMiners). Wrong input voltage may damage the miner.
- The SC5 Pro II draws about 15 A at 220 V (calculated). Use a power cord, PDU and circuit rated for at least that current.

**CAUTION · EQUIPMENT**

- Don't open the case or remove screws; unauthorised disassembly can void the warranty.
- Keep the miner away from water and condensing humidity.

## 2.2 Electrical requirements

| | |
|---|---|
| Input | **170–300 V AC (OneMiners)** |
| Typical load | **3,300 W** |
| Current | **about 15 A at 220 V (calculated)** |
| Power cord | **Rated for the current above** |

Use earthed circuits sized by a licensed electrician to local code. Don't use household extension leads or multi-plugs.

## 2.3 Climate and site

| CONDITION | REQUIREMENT |
|---|---|
| Operating temperature | 5–35 °C |
| Humidity | 10–65% RH (ASIC Miner Value) |
| Noise | 55 dB |

- Keep intake and exhaust clear and don't let hot exhaust air flow back into the intake.
- At 55 dB, the SC5 Pro II isn't suitable for living or office spaces.
- Avoid dust, salt air and corrosive gases; clean more often in dusty sites.

SOURCE ASIC Miner Value, Goldshell SC5 Pro II; OneMiners product page.

# 03 CHAPTER Initial Setup

These steps take a new SC5 Pro II from the box to its management interface. If your miner is hosted by OneMiners, our team does this for you; skip to Chapter 8.

## 3.1 Unboxing and connecting

- Confirm the label shows **SC5 Pro II**. Inspect for physical damage and loose screws, and check cable connections before starting.

1. **Network**
   Connect an Ethernet cable.
2. **Power**
   Connect a C19 power cord rated 16 A and switch on.
3. **Start-up**
   The lights flash red and green briefly, then only the green light blinks rapidly.

## 3.2 Finding the miner's IP address

1. On a device on the same network, open find.goldshell.com (Google Chrome preferred).
2. Press the **IP** button on the miner, then pick the entry with an update time of a few seconds ago.
3. Click the icon in the settings column to open the dashboard.

## 3.3 Unlocking the dashboard

1. Click **Unlock** at the top right. The initial password is `123456789`.
2. Change it on the **System** page: enter the current and new passwords, then click **Change**.

SOURCE Goldshell help centre, MAX Series Tutorial: finding the IP, unlocking, pools and system settings. Goldshell uses the same web interface across its range; confirm menu names on your SC5 Pro II.

# 04 CHAPTER Mining Configuration

The SC5 Pro II mines on the Blake2b-Sia algorithm. Enter a pool for that coin.

## 4.1 Setting up pools

1. Open **Miner** › **ADD** › **Pool Config**.
2. Enter the pool URL, miner name (`account.worker`; the worker part is optional) and password.
3. Click **Apply** and wait for the pool to turn green. A hashrate curve on the Home page confirms the connection.

Up to three pools can be configured; lower-priority pools are used only when higher ones are offline. Pool details must match the coin being mined, or the miner can malfunction.

| FIELD | WHAT TO ENTER |
|---|---|
| **Pool / mining address** | The pool's stratum address, in the format `stratum+tcp://host:port`. Copy it from your pool's "Connect" or "Getting started" page. |
| **Worker / user** | Your pool account or wallet address plus a worker name, usually `account.worker`, for example `account.sc5proii01`. |
| **Password** | Optional. Most pools accept any value, such as `x`. |

**COIN AND POOL**
The miner runs the Blake2b-Sia algorithm. Manufacturers and calculators list Siacoin (SC); the OneMiners listing names BTCB2. Use a pool for the coin you intend to mine and check its worker format.

**CAUTION**
Use only pool addresses from the pool's official website, and always add at least one backup pool. A mistyped address mines for nobody.

**ONEMINERS**
Hosted miners are configured from the OneMiners platform rather than the miner's own dashboard. To change pools, use **Pool Settings** in your account (see 8.2).

SOURCE Goldshell help centre, MAX Series Tutorial: Pool Config.

# 05 CHAPTER Monitoring Performance

Judge performance by the average hashrate after the miner has run for some time.

## 5.1 What "normal" looks like

| 13.58–14.42 TH/s | 3,135–3,465 W | < 1 % |
|---|---|---|
| Average hashrate (±3%) | Wall power (±5%) | Pool rejection rate |

Calculated from the rated values with the manufacturer's usual tolerances (hashrate ±3%, power ±5%).

## 5.2 What to watch

| VALUE | MEANING |
|---|---|
| **Average hashrate** | The most reliable measure of performance. The real-time figure moves with every share. |
| **Board temperatures** | Board temperatures should stay stable. Keep the room within 10–35 °C, as Goldshell recommends. |
| **Fan speed** | Every fan should report a speed. A stopped fan raises temperatures and stops mining. |
| **Pool status** | Active pool, accepted and rejected shares. Rejection below 1% is normal. |

# 06 CHAPTER Firmware and Maintenance

Keep the firmware current and the airflow clean. Most problems on air-cooled miners trace back to dust, fans or room temperature.

## 6.1 Firmware, reset and locating the miner

- Firmware: use **Update** on the **System** page, with a file from Goldshell or the OneMiners Manuals & Firmware Library made for the SC5 Pro II.
- Factory reset: click **Reset** on the System page. All configuration is lost.
- Locate: enable **Light indicator** on the Miner page; the lights flash red and blue.

> ! **GOLDSHELL CARE RULES**
> Don't dismantle the miner; disassembly voids the warranty. Keep it clean, dry and within 10–35 °C ambient and below 65% humidity, as Goldshell's tutorial recommends.

SOURCE Goldshell help centre, MAX Series Tutorial: System page and safety notes.

## 6.2 Preventive maintenance

| WHEN | TASK |
|---|---|
| **Daily / remotely** | Check average hashrate, board temperatures, fan speeds and pool status. |
| **Monthly** | Check room temperature and humidity against 2.3. Look for dust on fan guards. |
| **Every 1–3 months** | Switch off and unplug, then clean fans and heat sinks with dry compressed air. |
| **Regularly** | Check power cords and plugs for heat marks. Check for new firmware. |

Intervals are OneMiners recommendations. Clean more often in dusty sites.

# 07 CHAPTER Troubleshooting

Start with the symptom table. Hosted customers: don't attempt repairs yourself; contact OneMiners service.

| SYMPTOM | CHECK |
|---|---|
| **Miner doesn't power on** | Check the supply is 170–300 V AC (OneMiners) and the power cord is fully seated and rated for the current. |
| **No network / IP not found** | Check the cable. Open find.goldshell.com, press the miner's IP button and pick the newest entry. |

| SYMPTOM | CHECK |
|---|---|
| **Pool won't connect** | Re-check the pool address and port, the worker name, gateway and DNS. Make sure the pool port isn't blocked by a firewall. |
| **Low or unstable hashrate** | Compare the average hashrate with 5.1. Check board temperatures, fans and dust. Update the firmware. |
| **Overheating** | Check the room is within 5–35 °C, fans are running and intake and exhaust are clear. Clean, then restart. |
| **Smell, unusual sound or smoke** | Switch off immediately and contact service. |

SOURCE Based on Goldshell documentation cited in Chapters 2–6.

**ONEMINERS**
For a hosted miner, send the symptom and your miner's service ID to **service@oneminers.com** or WhatsApp **+1 305 867 6143**. Repairs under warranty are handled on site by our repair team.

# 08 CHAPTER OneMiners Platform Guide

Miners hosted by OneMiners are monitored and managed from your account at app.oneminers.com or the OneMiners mobile app. Screens in this chapter are from OneMiners platform v1.2 and show example values from other miners, not an SC5 Pro II.

## 8.1 Miner details

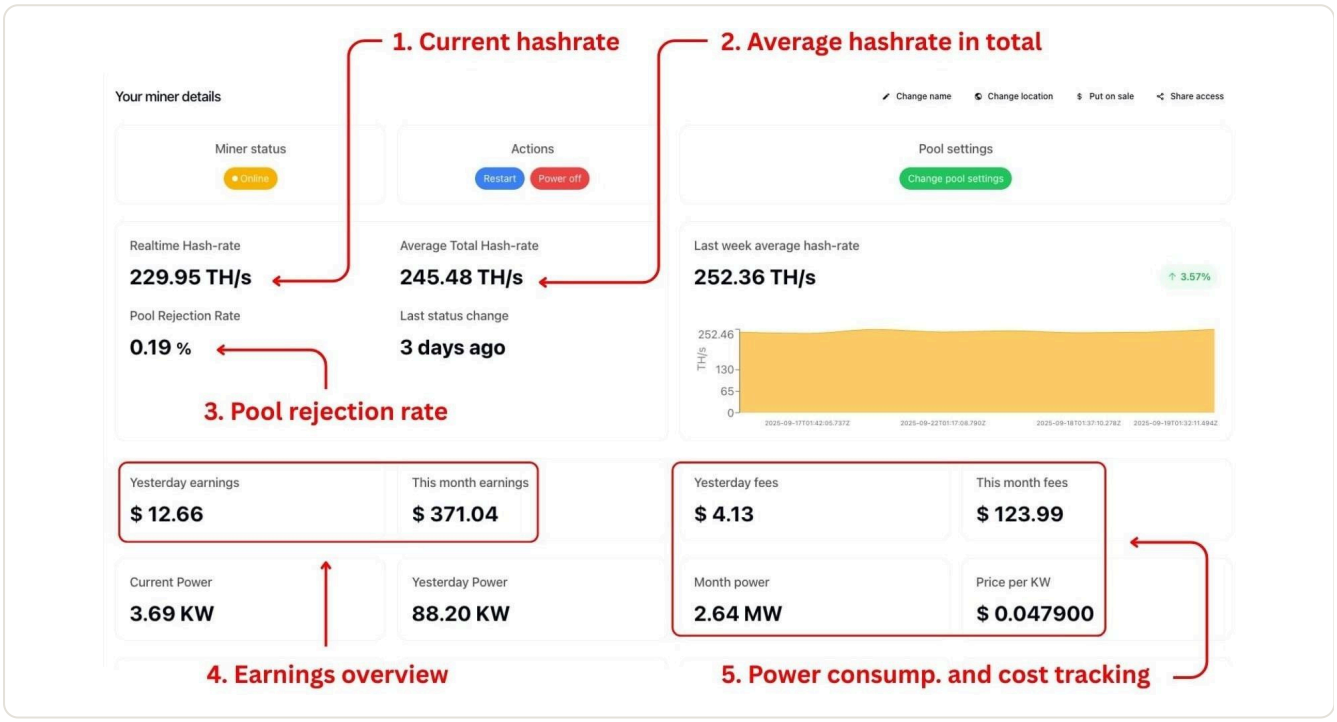



**Figure 8-1** Miner details on OneMiners platform v1.2 (example values).

| | |
|---|---|
| **1 · Current hashrate** | Real-time hashrate (for the SC5 Pro II, in TH/s). It moves with network stability, hardware and pool communication. |
| **2 · Average hashrate** | Average over a longer period (typically 24 h). The most reliable measure of performance; for the SC5 Pro II, expect about 13.58–14.42 TH/s. |
| **3 · Pool rejection rate** | Share of submitted shares the pool rejected. Below 1% is healthy. |
| **4 · Earnings overview** | Estimated earnings for the selected period, based on accepted shares. |
| **5 · Power and cost** | Real-time and historical energy use (kW) and its cost at your configured price per kWh. |

## 8.2 Pool settings

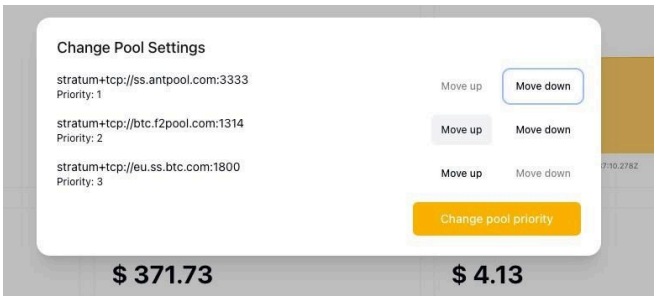



**Figure 8-2** Change Pool Settings.

- Up to three pools can be connected.
- Pools are listed in priority order. If the first is unavailable, the miner switches to the second, then the third.
- Use **Move up** / **Move down** to set the order, then **Change pool priority** to apply it.

## 8.3 Earnings and fees




**Figure 8-3** Earnings, fees, power and price per kWh (example values).

- **Earnings:** daily, monthly and cumulative mining rewards in USD or your selected currency.
- **Fees:** pool and platform fees deducted from earnings, shown daily and monthly.
- **Net result:** earnings minus fees, which is your net mining income.

## 8.4 Hardware status

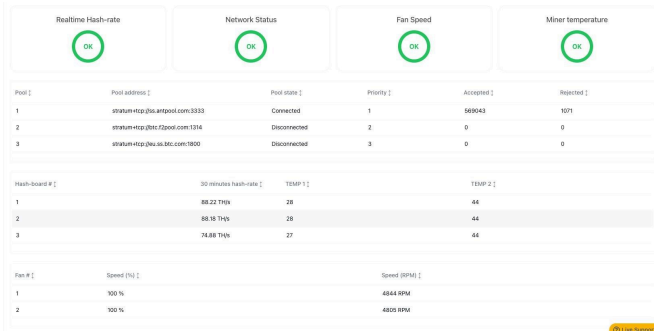



**Figure 8-4** Hardware status (example from an air-cooled miner).

- **Network status:** whether the miner is connected to its pools. Address disconnections immediately.
- **Miner temperature** and **hashboard table:** per-board hashrate and temperatures. Useful for spotting an underperforming board early.

> **AIR-COOLED UNITS**
> Fan speed is shown per fan (2 fans on the SC5 Pro II). A slow or stopped fan raises temperatures and stops mining, so act on fan alerts quickly.

ONEMINERS OneMiners platform v1.2. Confirm layout against the current version of your account.

CHAPTER 09

# OneMiners Hosting and Warranty

OneMiners hosts customer-owned miners in its data centers, providing power, cooling, racking and monitoring. Terms below reflect OneMiners' published pages as checked on 7 November 2026.

## 9.1 Hosting

- Hosting is offered across 17 data centers worldwide, **from 3.6¢ per kWh** at the time of writing.
- Locations include Nigeria, Ethiopia, Dubai, the USA (Texas, Houston, Georgia, South Carolina, Kansas and a no-service-fee option), Finland, Norway, Canada, Brazil, Czechia, China and Paraguay.
- Hosted orders are deployed turnkey; OneMiners racks, connects and monitors the miner.
- Air-cooled miners like the SC5 Pro II are accepted at most sites. Ask sales which locations currently host the SC5 Pro II.

Current prices and locations: oneminers.com/pages/hosting-centers.

## 9.2 Warranty

**HOSTED WITH ONEMINERS**

**7-year full warranty** for miners hosted in the USA, Dubai, Norway, Finland, Ethiopia, Nigeria and China.

- Free on-site repairs
- No-cost replacement of power supplies and cables
- No labour or diagnostic fees

**SHIPPED TO YOU**

**Standard 12-month warranty**, unless the manufacturer specifies otherwise.

- Free repair of manufacturing defects
- Replacement of defective units when necessary
- Valid only when the miner is operated according to official instructions

### All customers during warranty

Remote diagnostics, real-time monitoring, 24/7 technical support, and firmware upgrades and maintenance.

### Exclusions

The warranty may be voided by damage from misuse, unauthorised modifications or non-compliant operation. For the SC5 Pro II, this includes damage from running outside 5–35 °C or 170–300 V AC (OneMiners), undersized power cords, blocked airflow, firmware for other models, or opening the unit.

### Out of warranty

Repairs typically cost **US$80–220**, depending on the fault and parts required.

### Making a claim

Contact OneMiners support with your miner's hosting details and service ID through oneminers.com/pages/contact or **service@oneminers.com**.

ONEMINERS OneMiners Warranty Policy, oneminers.com/pages/warranty-policy . The policy page prevails if it differs from this summary.

# 10 CHAPTER Wallet and Mining Rewards

Rewards from a hosted miner are credited to your OneMiners wallet, where you can withdraw them or exchange between currencies.

## 10.1 Automatic mining balance

- The miner starts generating rewards as soon as it is installed and activated.
- If no energy payment has been preloaded, mining continues and energy costs and fees are deducted automatically from the rewards.
- If funds are preloaded in advance, earnings are credited without automatic deductions.
- You can change your payout wallet address in the wallet settings.

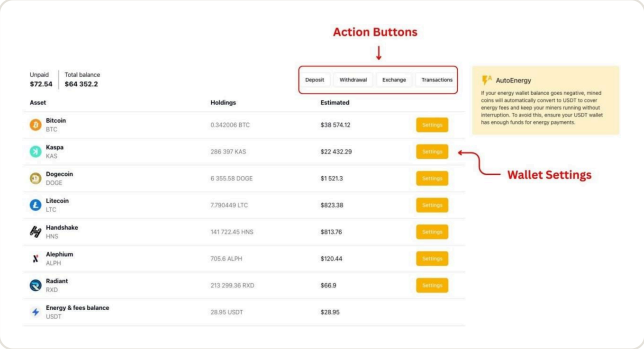



**Figure 10-1** Wallet section.

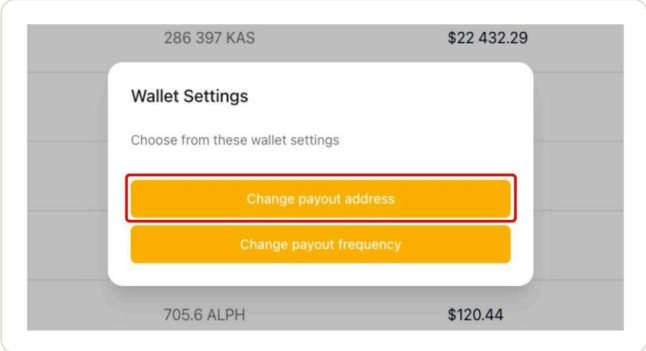



**Figure 10-2** Changing the payout address.

## 10.2 Withdrawals

1. Go to **Wallet** › **Withdrawal**.
2. Add a crypto wallet address or a bank account.
3. Select the currency, enter the amount and confirm.

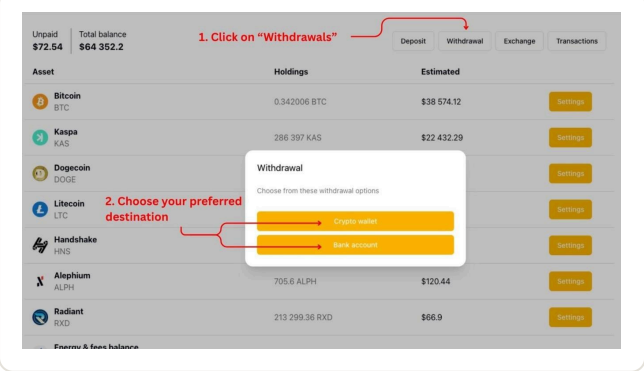



**Figure 10-3** Choosing a withdrawal destination.

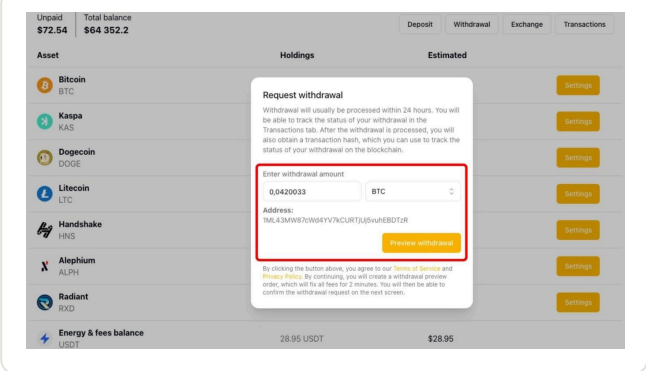



**Figure 10-4** Choosing currency and amount.

## 10.3 Exchange

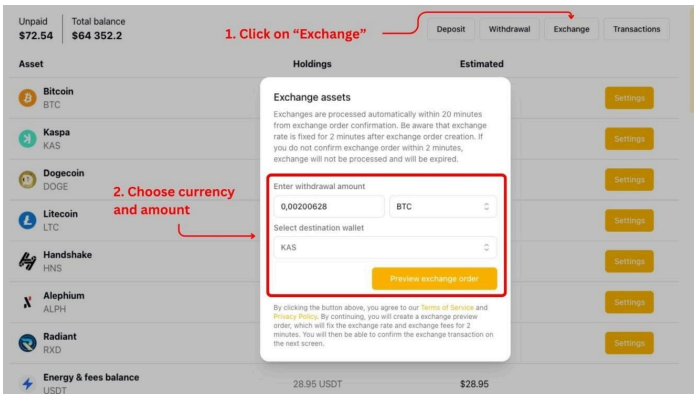



**Figure 10-5** Exchanging currencies.

1. Go to **Wallet** › **Exchange**.
2. Select the currencies to exchange. You can also convert directly into **Energy & Fees** funds to keep the miner running.
3. Enter the amount and confirm.

> **BEFORE YOU WITHDRAW**
> Double-check addresses and networks. Crypto transfers to a wrong address usually can't be reversed. Keep enough Energy & Fees balance to avoid deductions from your rewards.

ONEMINERS OneMiners platform v1.2.

CHAPTER 11

# Additional OneMiners Features

Optional tools in your OneMiners account. Availability and settings can change; check your dashboard for what is active on your account.

## 11.1 AI Smart Mining

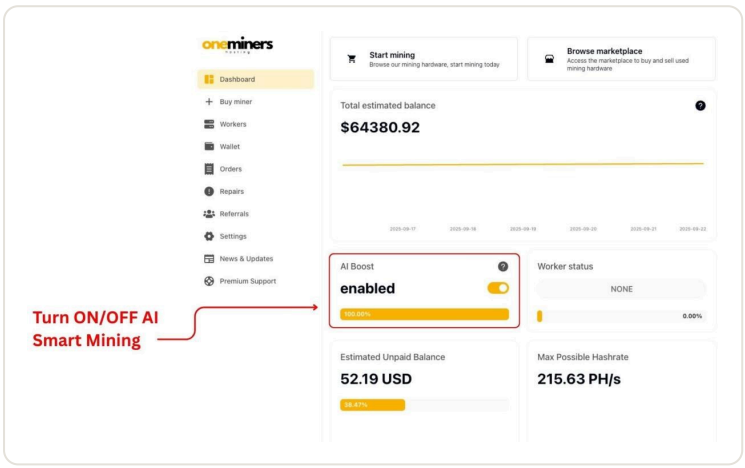



**Figure 11-1** AI Boost toggle on the dashboard (platform v1.2).

AI Smart Mining analyses market conditions and pool performance and can switch your miner to the pools it calculates are most profitable.

- Turn it on or off with the **AI Boost** toggle on your dashboard.
- Your hardware keeps mining to your own account and wallet.


Results depend on hardware and market conditions and aren't guaranteed. More information: oneminers.com/pages/ai-smart-mining.

## 11.2 OneMiners mobile app

Monitor and manage your miners from your phone: start and stop miners, view hashrate, power use and hardware status, and manage balances and withdrawals. The app is built on the CircleHash white-label hosting platform and is free.

App Store

Google Play

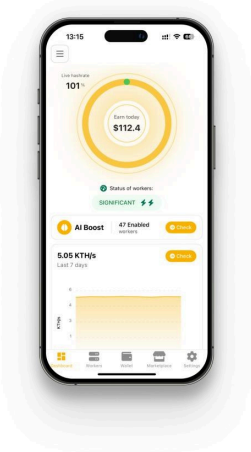


## 11.3 Profitability tools

Mining income from the SC5 Pro II depends on the price of the coin mined, network difficulty and your electricity cost, all of which change daily. For current estimates, use the live tools rather than figures printed in a manual:

- Miner profitability table: oneminers.com/pages/miner-profitability

For the SC5 Pro II, use 14 TH/s and 3,300 W with your own price per kWh. Estimates aren't financial advice.

# 12 CHAPTER Official Resources and Support

## 12.1 Resources

GOLDSHELL
**Find miner tool**
find.goldshell.com

GOLDSHELL
**Help centre**
goldshellhelp.zendesk.com

ONEMINERS
**Manuals & Firmware Library**
oneminers.com/pages/manuals-and-firmware

ONEMINERS
**Product page**
oneminers.com/products/goldshell-sc5-pro-ii-14-th-s

ONEMINERS
**Warranty policy**
oneminers.com/pages/warranty-policy

ONEMINERS
**Hosting locations**
oneminers.com/pages/hosting-centers

## 12.2 Contact OneMiners

SUPPORT, 24/7

**+1 305 867 6143**

WhatsApp

**+1 607 9009 004** · Sales, USA

**service@oneminers.com** · Service and repairs
**sales@oneminers.com** · Sales
**payinquire@oneminers.com** · Payments

Telegram: t.me/oneminers_hosting

ADDRESS

CIRCLEHASH LLC
701 Tillery Street
Austin, Texas 78702, USA

Contact page

Manuals library

## 12.3 Sources used for this version


1. ASIC Miner Value, Goldshell SC5 Pro II (14 TH/s): release, hashrate, power, efficiency, noise, temperature, humidity, size, weight.
2. D-Central, SC5 Pro II record: no manufacturer documentation found (June 2026).
3. OneMiners product page, Goldshell SC5 Pro II 14 TH/s.
4. Goldshell help centre, MAX Series Tutorial: finding the IP, unlock password, pools, system page and care notes.
5. OneMiners: product page, Warranty Policy, hosting pages, AI Smart Mining page, Media Kit, site contact details. All checked 7 November 2026.

## 12.4 Revision history

| VERSION | DATE | CHANGES |
|---|---|---|
| **V1.0** | Nov 2026 | First edition on the OneMiners media-kit template: manufacturer specifications with conflicts listed in 1.4, safety, installation, setup, pools, monitoring, firmware, maintenance and troubleshooting. Current warranty, hosting and contact details. |