MICROBT · WHATSMINER

# WhatsMiner M64
# 206 TH/s

Hydro-cooled Bitcoin server · SHA-256 · compact hydro server

COIN · ALGORITHM
**Bitcoin · SHA-256**

COOLING
**Hydro (liquid loop)**

POWER
**220–277 V AC, about 5 kW**

RELEASED
**2024**



Image: Image supplied by OneMiners

## Product Manual

Setup, operation, maintenance and OneMiners hosting guide

**Version 1.0**
First edition, November 2026
Information checked 7 Nov 2026

Contains manufacturer documentation © MicroBT, summarised for customer reference.

# About this manual

This manual covers the **MicroBT WhatsMiner M64**, a liquid-cooled server. MicroBT rates it at **180–206 TH/s** and **19.9 J/TH**.

Some OneMiners listings describe the M64 as air-cooled with a 110–240 V C13 plug. That is wrong: it needs a liquid-cooling loop and the supply in 2.2.

Each section that reproduces or summarises manufacturer content is marked with a **Source** tag. Values that sources disagree on, or that no source confirms, are marked **Needs verification** and listed in section 1.4. Chapters 8 to 12 cover the OneMiners platform, hosting, warranty and wallet, and are marked **OneMiners**.

## Before you start

| CHECK | POWER | COOLING | NETWORK |
|---|---|---|---|
| **Label says M64**<br>Check the version on the label. | **220–277 V AC, about 5 kW**<br>Three-phase supply. | **Inlet 35–70 °C**<br>Engineered loop, stainless or approved parts. | **RJ45 + DHCP**<br>A Windows PC for IP Reporter. |

## How notices are used

**DANGER**
Risk of electric shock, fire, burst pipes or injury. Do not continue until the condition is met.

**CAUTION**
Risk of damage to the miner, lost earnings or loss of data. Read before acting.

**NOTE**
Useful background, limits of a specification, or where to check further.

**ONEMINERS**
Applies to miners hosted in a OneMiners data center.

## Copyright and disclaimer

© OneMiners, 2026. This manual combines documentation published by the manufacturer, MicroBT (Shenzhen MicroBT Electronics Technology Co., Ltd.), and other cited sources with supplementary material written by OneMiners (platform, hosting, warranty and wallet chapters). Manufacturer content remains the property of its owner and is reproduced or summarised here for the convenience of OneMiners customers. OneMiners claims no ownership of it. All product names and trademarks belong to their respective owners.

Specifications are typical values and may change without notice. Always confirm against the label on your unit and the latest manufacturer documentation. Information about profitability, hosting prices and platform features is for guidance only and is not financial advice. OneMiners' supplementary chapters may not be copied or redistributed without written permission.

# Contents


| | | |
|---|---|---|
| 01 | **Product Overview**<br>Specifications, versions and open questions | 4 |
| 02 | **Safety and Installation Requirements**<br>Electrical, coolant loop and rack installation | 5 |
| 03 | **Initial Setup**<br>Inspection, IP address and dashboard login | 7 |
| 04 | **Mining Configuration**<br>Pools, worker names and saving settings | 8 |
| 05 | **Monitoring Performance**<br>What to watch and what normal looks like | 9 |
| 06 | **Firmware and Maintenance**<br>Firmware, coolant testing, shutdown and draining | 10 |
| 07 | **Troubleshooting**<br>Power, network, pools and cooling | 11 |
| 08 | **OneMiners Platform Guide**<br>Miner details, pool settings, earnings and hardware status | 12 |
| 09 | **OneMiners Hosting and Warranty**<br>Hosting service, warranty terms, exclusions and support | 14 |
| 10 | **Wallet and Mining Rewards**<br>Mining balance, payout address, withdrawals and exchange | 15 |
| 11 | **Additional OneMiners Features**<br>AI Smart Mining, mobile app and profitability tools | 17 |
| 12 | **Official Resources and Support**<br>Links, contacts, sources and revision history | 18 |

CHAPTER 01

# Product Overview

The WhatsMiner M64 is a hydro-cooled SHA-256 server from MicroBT (compact hydro server).



**Figure 1-1** WhatsMiner M64 206 TH/s. Image: Image supplied by OneMiners.

## 1.1 Key figures

| 206 TH/s | 4,100 W | 19.9 J/TH |
|---|---|---|
| Typical hashrate | Power on wall | Efficiency |

## 1.2 Specifications

| ITEM | VALUE |
|---|---|
| **PRODUCT** | |
| Model / version | **WhatsMiner M64** |
| Algorithm / coins | **SHA-256 · BTC / BCH / BSV** |
| Hashrate | **180–206 TH/s (MicroBT) · 206 TH/s bin** |
| Power on wall | **about 3,580–4,100 W (calculated) (MicroBT) · 4,100 W bin** |
| Efficiency | **19.9 J/TH** |
| **POWER** | |
| Input | **220–277 V AC, about 5 kW** |
| Power cable | **Custom cable, ≥ 25 A (MicroBT)** |

| ITEM | VALUE |
|---|---|
| **HARDWARE** | |
| Network | **RJ45 Ethernet 10/100M** |
| Size (L×W×H) | **371 × 290 × 109 mm** |
| Weight | **16 kg / 17 kg** |
| Noise | **Fanless server (pump and dry-cooler noise not included)** |
| **COOLING AND ENVIRONMENT** | |
| Inlet coolant | **35–70 °C normal · 35–55 °C high mode** |
| Flow | **≥ 3.5 L/min (±10%)** |
| Pressure | **≤ 400 kPa** |
| Humidity | **5–85% RH, non-condensing** |

SOURCE MicroBT M6X series manual (via Zeus Mining); OneMiners product pages.

**OneMiners bins (listing values)**

| VERSION | HASHRATE | POWER ON WALL | EFFICIENCY |
|---|---|---|---|
| 184 TH/s (OneMiners) | 184 TH/s | 3,662 W | 19.9 J/TH |
| 210 TH/s (OneMiners) | 210 TH/s | 4,179 W | 19.9 J/TH |

## 1.3 Hardware

| | |
|---|---|
| **Cooling** | Liquid loop through internal cold plates. No fans. |
| **Power** | Three-phase input. |
| **Control panel** | ETH port · **IP Report** button · **Reset** button · status LEDs. |

SOURCE Manufacturer specification; standard layout.

## 1.4 Values that need verification

These values conflict between sources or aren't confirmed by the manufacturer. Check the label on your unit, and ask OneMiners support before planning power or cooling around them.

| ITEM | WHAT THE SOURCES SAY | USED IN THIS MANUAL |
|---|---|---|
| **Cooling and plug** | OneMiners lists the M64 as air-cooled with a C13 plug, 430 × 155 × 226 mm | Hydro, custom ≥ 25 A cable (MicroBT) |
| **210 TH/s bin** | Above MicroBT's 180–206 TH/s range | Check the label |

# 02 CHAPTER Safety and Installation Requirements

The M64 needs three-phase power and an engineered liquid-cooling loop. Planning and installation must be done by qualified electrical and cooling personnel.

## 2.1 Safety warnings

**DANGER · ELECTRICAL**

- The M64 runs on **three-phase 220–277 V AC, about 5 kW**. Connection must be made by a licensed electrician, with earthing, surge protection and a disconnect that breaks all phases.
- Use only the original power cable and quick connectors. Other parts aren't covered by MicroBT's warranty.
- Keep the miner free of condensation. If condensation forms, dry it fully before powering on.

**CAUTION · COOLING LOOP**

- Keep the loop below **400 kPa**; higher pressure can deform the cold plate. Fit a **4 bar safety relief valve** and a constant-pressure expansion tank.
- **No copper** in the loop: it causes galvanic corrosion with the aluminium cold plate. Use stainless steel piping and pumps.
- A loose connector can cause over-temperature protection or cold-plate damage.

SOURCE MicroBT, WhatsMiner Hydro Cooling Operation Guide V1.5.

## 2.2 Electrical requirements

| | |
|---|---|
| Supply | **220–277 V AC, about 5 kW** |
| Power cable | **Custom cable, ≥ 25 A (MicroBT)** |
| Typical load | **about 3,580–4,100 W (calculated) (MicroBT)** |
| Protection | **Earthing, surge protection, disconnect breaking all phases** |

Size breakers, cables and distribution to local electrical code. This must be done by a licensed electrician.

## 2.3 Coolant and loop requirements

| | |
|---|---|
| Inlet temperature | **35–70 °C normal · 35–55 °C high mode** |
| Flow | **≥ 3.5 L/min (±10%)** |
| Pressure | **≤ 400 kPa; 4 bar relief valve** |
| Coolant | **Pure or distilled water + MicroBT inhibitor + antifreeze; pH 7–8.7** |
| Piping | **Stainless steel; no copper** |
| Outlet temperature | **Up to 80 °C** |

### Flow with antifreeze (rated)

| GLYCOL | MIN. FLOW | INLET, NORMAL MODE |
|---|---|---|
| Pure water | ≥ 10 L/min | 20–50 °C |
| 20% | ≥ 10.7 L/min | 20–50 °C |
| 30% | ≥ 11 L/min | 20–49 °C |
| 40% | ≥ 11.4 L/min | 20–48 °C |
| 50% | ≥ 11.6 L/min | 20–47 °C |

### Coolant composition and quality

- Pure or distilled water, plus MicroBT's specified corrosion inhibitor, plus antifreeze in the ratio your lowest site temperature needs.
- New coolant: pH 7.0–8.7; chloride < 20 mg/L; sulfate < 10 mg/L; total hardness < 1 mg/L; copper, iron and aluminium ions each < 0.5 mg/L.
- Filtration: main filter of 100 mesh or finer, plus a recommended 10 µm side filter.
- Before first fill, flush with deionized water (≤ 5 µS/cm) several times, keep cleaning under 8 hours, and drain completely.

SOURCE MicroBT, WhatsMiner Hydro Cooling Operation Guide V1.5, Tables 3 and 4 and sections on system design and cleaning. MicroBT M6X series manual (via Zeus Mining); OneMiners product pages.

## 2.4 Rack installation

1. **Mount**
   Two people slide the M64 into the rack and tighten the front-panel screws.
2. **Water**
   Remove the protective caps and connect the **blue inlet** and **red outlet** quick connectors. Push the female head forward without holding the movable ring, then pull gently on the hose to confirm it's locked.
3. **Cables**
   Connect the network cable and the original power cable.
4. **Circulate**
   Turn on water circulation first and check for leaks before powering on.

### Power-on rules for a shared loop

- Confirm circulation is normal and all air has been purged. Air in the pump can damage it.
- Open the cooling components (pumps, valves, dry-cooler fans) fully before powering on. Switch the loop to automatic temperature control only once the miners approach rated power.
- Add miners to a loop **one at a time**, each only after the previous one has filled completely.
- Check that no condensation has formed on the server.

SOURCE MicroBT, WhatsMiner Hydro Cooling Operation Guide V1.5: Installation and Power-on.

# 03 CHAPTER Initial Setup

These steps take a racked M64 to its web interface. If your miner is hosted by OneMiners, our team does this for you; skip to Chapter 8.

## 3.1 Unboxing and inspection

- Check the carton for damage and confirm the label shows **M64**.
- Inspect the quick connectors, power socket and front panel. Make sure the connector caps are in place.
- Keep the packing for transport and warranty returns.

## 3.2 Finding the miner's IP address (WhatsMinerTool)

1. The miner gets its IP address by **DHCP** by default. Put your PC on the same network segment.
2. In **WhatsMinerTool**, open the **IP Monitor** tab, enter room, rack, layer and position numbers, then click **Start**.
3. About 30 seconds after power-on, press the **IPFOUND** button on the miner for more than 5 seconds. The IP address appears in the tool.

**NOT FOUND?**
Hold the **reset** button for more than 5 seconds to restore factory defaults, power off and on, wait 30 seconds, then press IPFOUND again.

### 3.3 Logging in

1. Enter the IP address in a web browser on the same network.
2. Log in with the default account for your firmware. **Needs verification**: MicroBT's hydro guide doesn't state the defaults. Many WhatsMiner releases use `admin` / `admin`.
3. Change the password after the first login.

### 3.4 Network and time settings (optional)

1. Static IP: **Configuration** › **Interfaces** › **Edit**, choose **Static address**, click **Switch protocol**, enter IP, mask, gateway, broadcast and DNS, then save and log in again at the new address.
2. Time: the miner ships with four public NTP servers. MicroBT recommends a local NTP server; edit it under **System** › **System Configuration**.

SOURCE MicroBT, WhatsMiner Hydro Cooling Operation Guide V1.5: Network Setup.

# 04 CHAPTER Mining Configuration

The M64 mines SHA-256 coins, mainly Bitcoin (BTC). Configure pools in the web interface or in bulk with WhatsMinerTool.

### 4.1 Setting up pools

1. Log in and open **Configuration** › **BTMiner Configuration**.
2. Enter the pool address and worker name for up to three pools, then click **Save & Apply**.
3. Restart BTMiner (**Status** › **BTMinerStatus**, **Restart BTMiner**) or reboot the control board (**System** › **Reboot**).

| FIELD | WHAT TO ENTER |
|---|---|
| **Pool / mining address** | The pool's stratum address, in the format `stratum+tcp://host:port`. Copy it from your pool's "Connect" or "Getting started" page. |
| **Worker / user** | Your pool account or wallet address plus a worker name, usually `account.worker`, for example `myaccount.m6401`. |
| **Password** | Optional. Most pools accept any value, such as `x`. |

**COIN AND POOL**
The miner mines SHA-256; this manual assumes Bitcoin (BTC). WhatsMinerTool can also apply pool settings to many miners at once.

**CAUTION**
Use only pool addresses from the pool's official website, and always add at least one backup pool. A mistyped address mines for nobody.

**ONEMINERS**
Hosted miners are configured from the OneMiners platform rather than the miner's own dashboard. To change pools, use **Pool Settings** in your account (see 8.2).

SOURCE MicroBT, WhatsMiner Hydro Cooling Operation Guide V1.5: Pool and Worker Configuration.

# 05 CHAPTER Monitoring Performance

For a hydro miner, coolant temperatures and flow matter as much as the hashrate. Watch both.

## 5.1 What to watch

| VALUE | MEANING |
|---|---|
| **Average hashrate** | The most reliable measure of performance. Compare it with 5.2. |
| **Inlet / outlet temperature** | Inlet must stay within 35–70 °C normal · 35–55 °C high mode. |
| **Hashboard status** | Each board should report and hash. A missing board points to a hardware or connection fault. |
| **Pool status** | Active pool, accepted and rejected shares. Rejection below 1% is normal. |

## 5.2 What "normal" looks like

| | | |
|---|---|---|
| **180–206 TH/s** | **about 3,580–4,100 (calculated) W** | **< 1 %** |
| MicroBT rated range (±10%) | Power | Pool rejection rate |

MicroBT tolerances: hashrate ±10%, efficiency ±5%.

**TEMPERATURE PROTECTION**
If inlet temperature, flow or outlet temperature leave their limits, the miner protects itself and hashrate drops or stops. Fix the cooling problem before restarting.

# 06 CHAPTER Firmware and Maintenance

Keep the firmware current and the coolant within its limits. Out-of-spec coolant and copper parts aren't covered by MicroBT's warranty.

## 6.1 Firmware

**USE THE RIGHT FILE**
Only install firmware MicroBT publishes for the **WhatsMiner M64**, from the MicroBT support site or the OneMiners Manuals & Firmware Library. Keep the miner powered during the upgrade. WhatsMinerTool can upgrade many miners in one batch.

## 6.2 Coolant testing schedule

| WHEN | TEST | LIMIT |
|---|---|---|
| Every 2 months | pH | 7.5–9.5 |
| Every 2 months | Conductivity increase | ≤ 1,500 µS/cm |
| Every 2 months | Inhibitor reserve alkalinity | ≥ 2.3 ml |
| Every 6 months | Bacteria | ≤ 1,000 cfu/ml |
| Every 6 months | Sulfate · chloride · sulfide | ≤ 10 · ≤ 20 · ≤ 1 mg/L |
| Every 6 months | Copper, iron, aluminium increase | ≤ 0.1 mg/L |
| Yearly | Replace coolant | Recommended after one year of use |

## 6.3 Shutdown, removal and draining

1. Shut down the miner and turn off its circuit breaker.
2. Remove the network and power cables; press the connector tab when unplugging power.
3. Disconnect the water connectors by holding the movable ring and pulling back.
4. Loosen the front-panel screws and remove the miner with two people.
5. Drain promptly if the miner will be stored or transported (MicroBT gives 2 hours as the limit): connect lines to the inlet and outlet and push out the coolant with low air pressure.

SOURCE MicroBT, WhatsMiner Hydro Cooling Operation Guide V1.5: Maintenance and Shutdown.

CHAPTER 07

# Troubleshooting

Start with the symptom table. Hosted customers: don't attempt repairs yourself; contact OneMiners service.

| SYMPTOM | CHECK |
|---|---|
| **Miner doesn't power on** | Check the supply is 220–277 V AC, about 5 kW and the breaker is on. Check the original power cable is fully seated. |
| **IP not found** | Check the cable and DHCP. Press IPFOUND for more than 5 s while IP Monitor is running. If needed, reset (hold reset > 5 s), power-cycle and try again. |
| **Pool won't connect** | Re-check the pool address, port and worker name, DNS and gateway, and that the NTP time is correct. |
| **Low hashrate or protection** | Check inlet temperature (35–70 °C), flow and pressure. Look for air in the loop, a closed valve, a loose connector or a blocked filter. |
| **Condensation** | Power off, dry the miner completely, and raise the inlet temperature above the room's dew point before restarting. |
| **Coolant leak** | Power off first, then isolate the water. Don't power on a wet server. |

SOURCE Based on MicroBT's WhatsMiner Hydro Cooling Operation Guide V1.5. MicroBT's full error-code list is in WhatsMinerTool and on support.whatsminer.com.

**ONEMINERS**

For a hosted miner, send the symptom and your miner's service ID to **service@oneminers.com** or WhatsApp **+1 305 867 6143**. Repairs under warranty are handled on site by our repair team.

# 08 CHAPTER OneMiners Platform Guide

Miners hosted by OneMiners are monitored and managed from your account at app.oneminers.com or the OneMiners mobile app. Screens in this chapter are from OneMiners platform v1.2 and show example values from other miners, not an M64.

## 8.1 Miner details

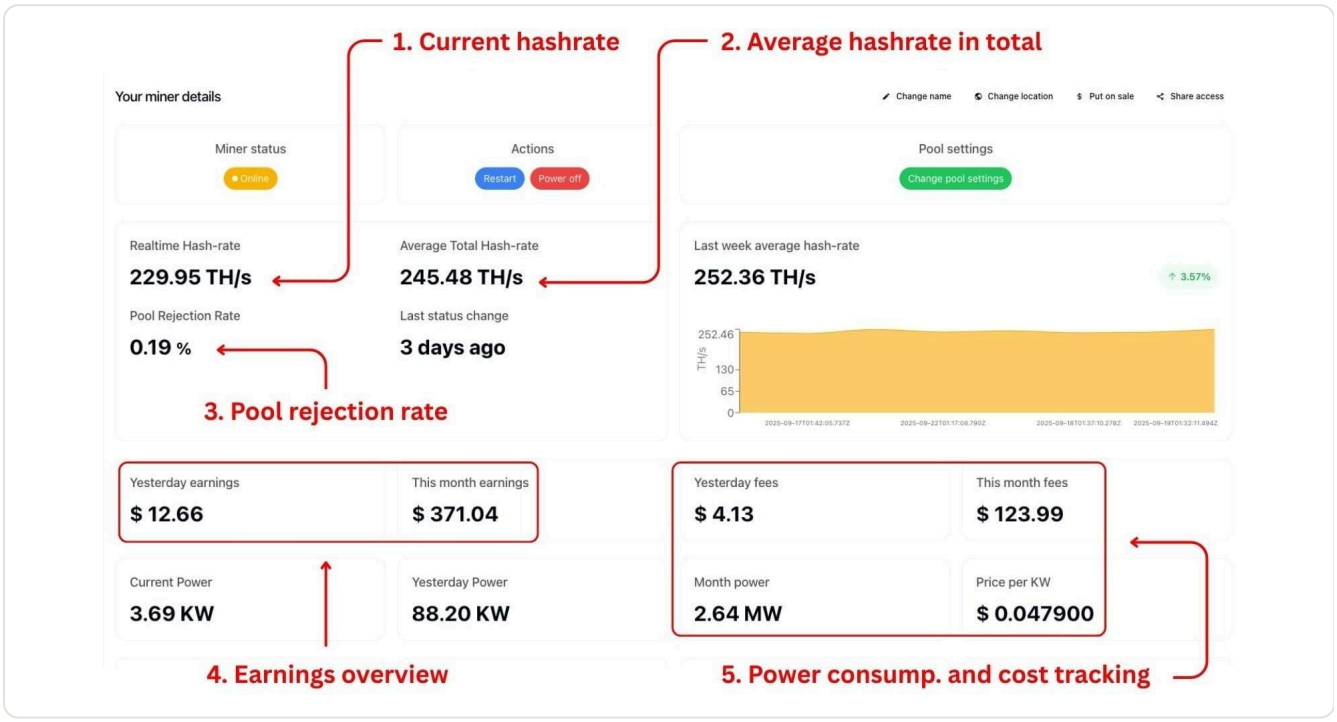



**Figure 8-1** Miner details on OneMiners platform v1.2 (example values).

| | |
|---|---|
| **1 · Current hashrate** | Real-time hashrate (for the M64, in TH/s). It moves with network stability, hardware and pool communication. |
| **2 · Average hashrate** | Average over a longer period (typically 24 h). The most reliable measure of performance; for the M64, expect about 200–212 TH/s. |
| **3 · Pool rejection rate** | Share of submitted shares the pool rejected. Below 1% is healthy. |
| **4 · Earnings overview** | Estimated earnings for the selected period, based on accepted shares. |
| **5 · Power and cost** | Real-time and historical energy use (kW) and its cost at your configured price per kWh. |

## 8.2 Pool settings

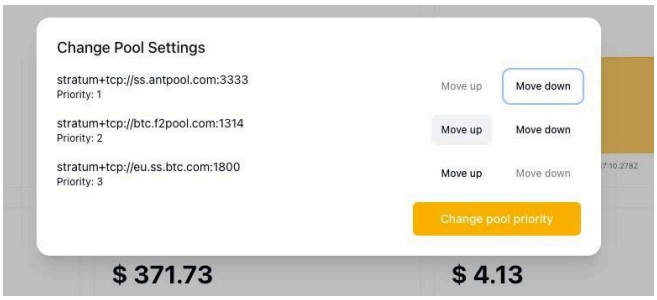



**Figure 8-2** Change Pool Settings.

- Up to three pools can be connected.
- Pools are listed in priority order. If the first is unavailable, the miner switches to the second, then the third.
- Use **Move up** / **Move down** to set the order, then **Change pool priority** to apply it.

## 8.3 Earnings and fees




**Figure 8-3** Earnings, fees, power and price per kWh (example values).

- **Earnings:** daily, monthly and cumulative mining rewards in USD or your selected currency.
- **Fees:** pool and platform fees deducted from earnings, shown daily and monthly.
- **Net result:** earnings minus fees, which is your net mining income.

## 8.4 Hardware status

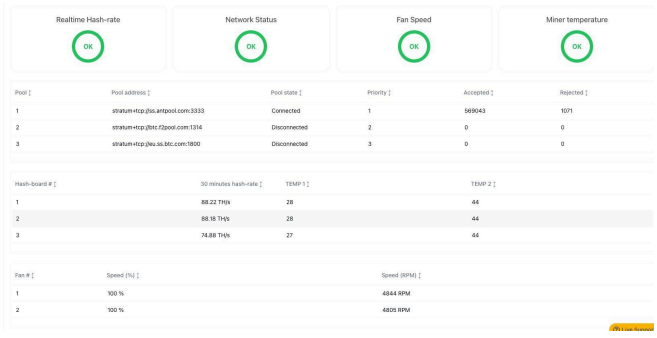



**Figure 8-4** Hardware status (example from an air-cooled miner).

- **Network status:** whether the miner is connected to its pools. Address disconnections immediately.
- **Miner temperature** and **hashboard table:** per-board hashrate and temperatures. Useful for spotting an underperforming board early.

> **HYDRO UNITS**
> The M64 is liquid-cooled. Fan readings, if any are shown, don't describe its cooling. Watch board and coolant temperatures and the cooling alerts instead.

ONEMINERS OneMiners platform v1.2. Confirm layout against the current version of your account.

CHAPTER 09

# OneMiners Hosting and Warranty

OneMiners hosts customer-owned miners in its data centers, providing power, cooling, racking and monitoring. Terms below reflect OneMiners' published pages as checked on 7 November 2026.

## 9.1 Hosting

- Hosting is offered across 17 data centers worldwide, **from 3.6¢ per kWh** at the time of writing.
- Locations include Nigeria, Ethiopia, Dubai, the USA (Texas, Houston, Georgia, South Carolina, Kansas and a no-service-fee option), Finland, Norway, Canada, Brazil, Czechia, China and Paraguay.
- Hosted orders are deployed turnkey; OneMiners racks, connects and monitors the miner.
- Hydro-cooled units need sites with a liquid-cooling loop. Ask sales which locations currently accept the M64.

Current prices and locations: oneminers.com/pages/hosting-centers.

## 9.2 Warranty

**HOSTED WITH ONEMINERS**

**7-year full warranty** for miners hosted in the USA, Dubai, Norway, Finland, Ethiopia, Nigeria and China.

- Free on-site repairs
- No-cost replacement of power supplies and cables
- No labour or diagnostic fees

**SHIPPED TO YOU**

**Standard 12-month warranty**, unless the manufacturer specifies otherwise.

- Free repair of manufacturing defects
- Replacement of defective units when necessary
- Valid only when the miner is operated according to official instructions

### All customers during warranty

Remote diagnostics, real-time monitoring, 24/7 technical support, and firmware upgrades and maintenance.

### Exclusions

The warranty may be voided by damage from misuse, unauthorised modifications or non-compliant operation. For the M64, this includes damage from incorrect voltage, coolant outside MicroBT's limits, copper parts in the loop, missing filters or relief valve, condensation, unofficial firmware, or opening the unit.

### Out of warranty

Repairs typically cost **US$80–220**, depending on the fault and parts required.

### Making a claim

Contact OneMiners support with your miner's hosting details and service ID through oneminers.com/pages/contact or **service@oneminers.com**.

ONEMINERS OneMiners Warranty Policy, oneminers.com/pages/warranty-policy . The policy page prevails if it differs from this summary.

# 10 CHAPTER Wallet and Mining Rewards

Rewards from a hosted miner are credited to your OneMiners wallet, where you can withdraw them or exchange between currencies.

## 10.1 Automatic mining balance

- The miner starts generating rewards as soon as it is installed and activated.
- If no energy payment has been preloaded, mining continues and energy costs and fees are deducted automatically from the rewards.
- If funds are preloaded in advance, earnings are credited without automatic deductions.
- You can change your payout wallet address in the wallet settings.

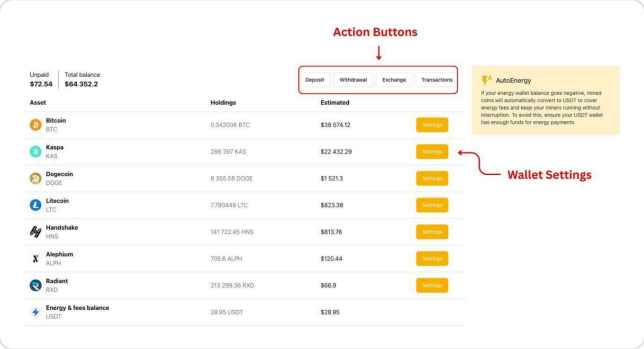



**Figure 10-1** Wallet section.

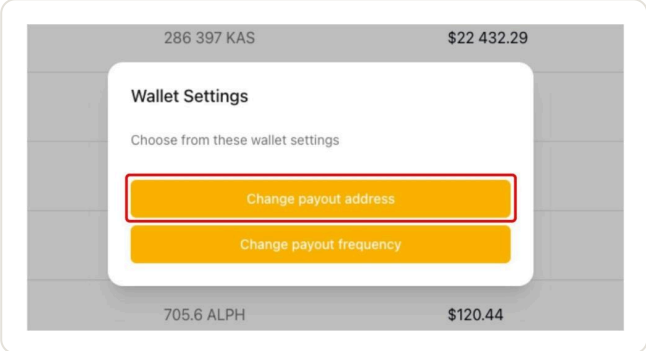



**Figure 10-2** Changing the payout address.

## 10.2 Withdrawals

1. Go to **Wallet** › **Withdrawal**.
2. Add a crypto wallet address or a bank account.
3. Select the currency, enter the amount and confirm.

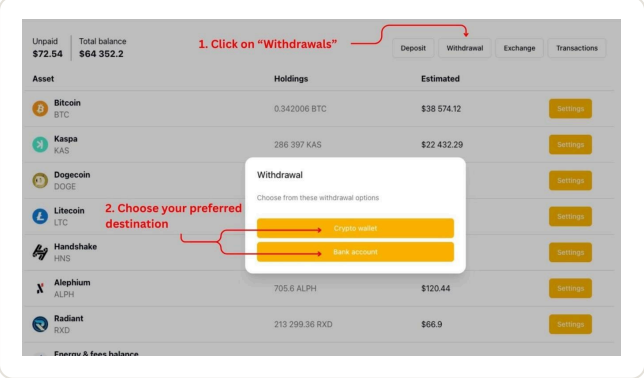



**Figure 10-3** Choosing a withdrawal destination.


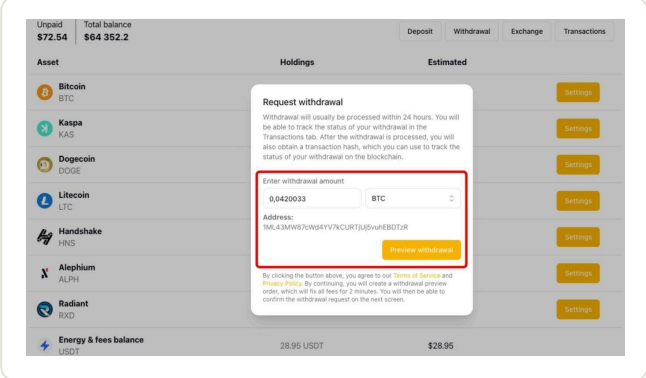



**Figure 10-4** Choosing currency and amount.

## 10.3 Exchange

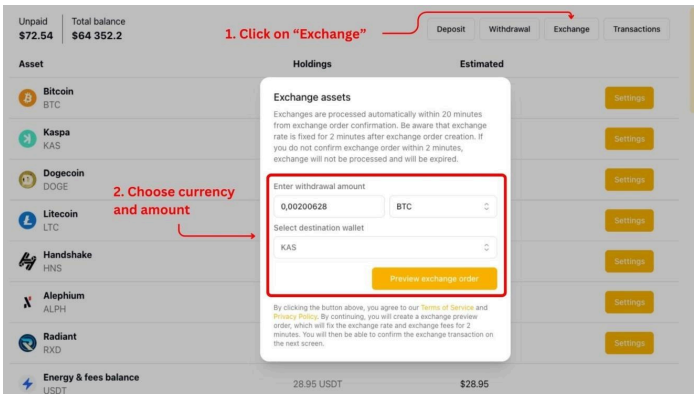


1. Go to **Wallet** › **Exchange**.
2. Select the currencies to exchange. You can also convert directly into **Energy & Fees** funds to keep the miner running.
3. Enter the amount and confirm.

**Figure 10-5** Exchanging currencies.

> **BEFORE YOU WITHDRAW**
> Double-check addresses and networks. Crypto transfers to a wrong address usually can't be reversed. Keep enough Energy & Fees balance to avoid deductions from your rewards.

ONEMINERS OneMiners platform v1.2.

CHAPTER 11

# Additional OneMiners Features

Optional tools in your OneMiners account. Availability and settings can change; check your dashboard for what is active on your account.

## 11.1 AI Smart Mining

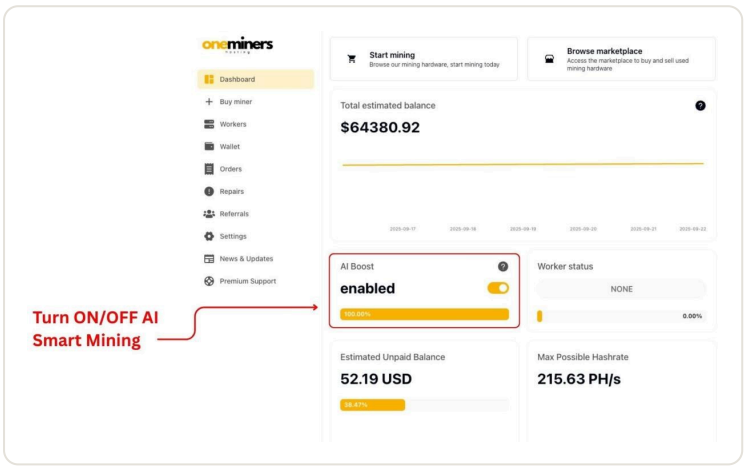



**Figure 11-1** AI Boost toggle on the dashboard (platform v1.2).

AI Smart Mining analyses market conditions and pool performance and can switch your miner to the pools it calculates are most profitable.

- Turn it on or off with the **AI Boost** toggle on your dashboard.
- Your hardware keeps mining to your own account and wallet.


Results depend on hardware and market conditions and aren't guaranteed. More information: oneminers.com/pages/ai-smart-mining.

## 11.2 OneMiners mobile app

Monitor and manage your miners from your phone: start and stop miners, view hashrate, power use and hardware status, and manage balances and withdrawals. The app is built on the CircleHash white-label hosting platform and is free.

App Store

Google Play

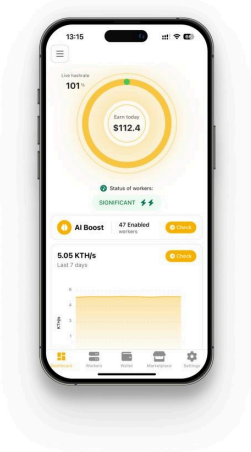


## 11.3 Profitability tools

Mining income from the M64 depends on the BTC price, network difficulty, transaction fees and your electricity cost, all of which change daily. For current estimates, use the live tools rather than figures printed in a manual:

- Miner profitability table: oneminers.com/pages/miner-profitability
- Bitcoin miners collection: oneminers.com/collections/bitcoin-miners

For the M64, use 206 TH/s and 4,100 W with your own price per kWh. Estimates aren't financial advice.

# 12 CHAPTER Official Resources and Support

## 12.1 Resources

MICROBT
**WhatsMiner support**
support.whatsminer.com

MICROBT
**Product manuals**
www.whatsminer.com/src/views/product_manual.html

ONEMINERS
**Manuals & Firmware Library**
oneminers.com/pages/manuals-and-firmware

ONEMINERS
**Product page**
oneminers.com/products/whatsminer-m64-210th-s

ONEMINERS
**Warranty policy**
oneminers.com/pages/warranty-policy

ONEMINERS
**Hosting locations**
oneminers.com/pages/hosting-centers

## 12.2 Contact OneMiners

**SUPPORT, 24/7**

**+1 305 867 6143**

WhatsApp

**+1 607 9009 004** · Sales, USA

**service@oneminers.com** · Service and repairs
**sales@oneminers.com** · Sales
**payinquire@oneminers.com** · Payments

Telegram: t.me/oneminers_hosting

**ADDRESS**

CIRCLEHASH LLC
701 Tillery Street
Austin, Texas 78702, USA

Contact page

Manuals library

## 12.3 Sources used for this version

1. MicroBT, WhatsMiner M6X series miner manual (as published by Zeus Mining): hashrate ranges, efficiency, power, input, cable, size, weight, environment, cooling.
2. OneMiners product pages (M64 184, 188 and 210 TH/s).
3. MicroBT, WhatsMiner Hydro Cooling Operation Guide V1.5: WhatsMinerTool, network and pool configuration, coolant rules.
4. OneMiners: product page, Warranty Policy, hosting pages, AI Smart Mining page, Media Kit, site contact details. All checked 7 November 2026.

## 12.4 Revision history

| VERSION | DATE | CHANGES |
|---|---|---|
| **V1.0** | Nov 2026 | First edition on the OneMiners media-kit template: manufacturer specifications with conflicts listed in 1.4, safety, installation, setup, pools, monitoring, firmware, maintenance and troubleshooting. Current warranty, hosting and contact details. |