BITAXE

Supra Hex 702
4.2 TH/s

Open-source solo Bitcoin miner · 6 × BM1368



COIN · ALGORITHM
Bitcoin · SHA-256

COOLING
Air (fans)

POWER
12 V DC adapter

RELEASED
Needs verification

Product Manual

Setup, operation, maintenance and OneMiners hosting guide

Version 1.0
First edition, November 2026
Information checked 7 Nov 2026

Contains open-source project documentation (Bitaxe), summarised for customer reference.

About this manual

This manual covers the **Bitaxe Supra Hex 702**, an open-source home miner rated at about **4.2 TH/s** and **90 W**.

Each section that reproduces or summarises manufacturer content is marked with a **Source** tag. Values that sources disagree on, or that no source confirms, are marked **Needs verification** and listed in section 1.4. Chapters 8 to 12 cover the OneMiners platform, hosting, warranty and wallet, and are marked **OneMiners**.

Before you start

CHECK	POWER	NETWORK	PLACE
Unit is a Supra Hex 702 Keep the packing.	**12 V adapter (included)** Not always included.	**2.4 GHz Wi-Fi** 5 GHz not supported.	**Vented spot** Away from liquids and children.

How notices are used

DANGER
Risk of electric shock, fire or injury. Do not continue until the condition is met.

CAUTION
Risk of damage to the miner, lost earnings or loss of data. Read before acting.

NOTE
Useful background, limits of a specification, or where to check further.

ONEMINERS
Applies to miners hosted in a OneMiners data center.

Copyright and disclaimer

© OneMiners, 2026. This manual combines documentation published by the manufacturer, Bitaxe, and other cited sources with supplementary material written by OneMiners (platform, hosting, warranty and wallet chapters). Manufacturer content remains the property of its owner and is reproduced or summarised here for the convenience of OneMiners customers. OneMiners claims no ownership of it. All product names and trademarks belong to their respective owners.

Specifications are typical values and may change without notice. Always confirm against the label on your unit and the latest manufacturer documentation. Information about profitability, hosting prices and platform features is for guidance only and is not financial advice. OneMiners' supplementary chapters may not be copied or redistributed without written permission.

Contents

01	**Product Overview** Specifications, versions and open questions	4
02	**Safety and Installation Requirements** Power supply and placement	5
03	**Initial Setup** Power, Wi-Fi and dashboard	6
04	**Mining Configuration** Pool, worker and solo mining	7
05	**Monitoring Performance** Dashboard values and what normal looks like	8
06	**Firmware and Maintenance** Updates, tuning and reset	8
07	**Troubleshooting** Power, Wi-Fi, pool and heat	9
08	**OneMiners Platform Guide** Miner details, pool settings, earnings and hardware status	10
09	**OneMiners Hosting and Warranty** Hosting service, warranty terms, exclusions and support	12
10	**Wallet and Mining Rewards** Mining balance, payout address, withdrawals and exchange	13
11	**Additional OneMiners Features** AI Smart Mining, mobile app and profitability tools	15
12	**Official Resources and Support** Links, contacts, sources and revision history	17

01 CHAPTER Product Overview

The Bitaxe Supra Hex is a six-chip (Bitmain BM1368) open-source Bitcoin miner, running Bitaxe firmware for solo mining at home.



Figure 1-1 Bitaxe Supra Hex 702 4.2 TH/s. Image: OneMiners product photo.

1.1 Key figures

4.2 TH/s	90 W	21.4 J/TH
Typical hashrate	Power on wall	Efficiency

1.2 Specifications

ITEM	VALUE
PRODUCT	
Model / version	**Bitaxe Supra Hex 702**
Algorithm / coins	**SHA-256 · BTC / BCH / BSV**
Hashrate	**4.2 TH/s**
Power on wall	**90 W**
Efficiency	**21.4 J/TH**
POWER	
Input	**12 V DC from the supplied adapter**
Power	**≈ 75–90 W**
PSU	**Supplied 12 V adapter**
Mains	**The adapter's own plug**

ITEM	VALUE
HARDWARE	
Network	**Wi-Fi 2.4 GHz**
Size (L×W×H)	**Board on a stand with fan**
Weight	**Needs verification**
Noise	**≈ 48 dB**
ENVIRONMENT	
Operating temperature	**Needs verification**

SOURCE Bitcoin Merch, "Set up guide for the Bitaxe SupraHex" (701); D-Central Bitaxe Hex guide; OneMiners product page.

1.3 Hardware

Chips	Six Bitmain BM1368.
Display	Shows the setup hotspot name and IP address.
Power	12 V DC from the supplied adapter.

SOURCE Bitcoin Merch, "Set up guide for the Bitaxe SupraHex" (701); D-Central Bitaxe Hex guide; OneMiners product page.

1.4 Values that need verification

These values conflict between sources or aren't confirmed by the manufacturer. Check the label on your unit, and ask OneMiners support before planning power or cooling around them.

ITEM	WHAT THE SOURCES SAY	USED IN THIS MANUAL
Model	Guides cover the Supra Hex 701; the 702 is a later board of the same 6 × BM1368 design	Check your board revision
Firmware	Supra Hex firmware differs from single-chip Bitaxe firmware	Only install Supra Hex builds
OneMiners listing	No specification table on the product page	Guide values

02 CHAPTER Safety and Installation Requirements

The Supra Hex 702 runs on low-voltage DC from a separate power supply and draws about 90 W.

2.1 Safety warnings

DANGER · POWER

- Use the supplied 12 V adapter (or a 12 V supply rated at least 10 A). Don't use 5 V, 19 V or 24 V supplies.

CAUTION · PLACEMENT

- The Supra Hex 702 is an open circuit board. Keep it away from liquids, metal objects and children, and handle it by the edges or stand.
- Keep the fan and heatsink unobstructed; the chip gets hot.

2.2 Power supply

Input	**12 V DC from the supplied adapter**
Power	**≈ 75–90 W**

PSU	**Supplied 12 V adapter**
Mains	**The adapter's own plug**

2.3 Where to put it

CONDITION	REQUIREMENT
Room	Normal indoor temperature; keep the fan and heatsink unobstructed
Surface	Stable, dry, non-flammable
Noise	≈ 48 dB

SOURCE Bitcoin Merch, "Set up guide for the Bitaxe SupraHex" (701); D-Central Bitaxe Hex guide; OneMiners product page.

03 CHAPTER Initial Setup

These steps take a new Supra Hex 702 from the box to mining.

3.1 Powering on

- Confirm the unit is the **Bitaxe Supra Hex 702**. A 12 V adapter is included.

1. **Power**
   Connect the DC power supply. There is no power switch; the miner boots when powered (15–30 s).

3.2 Connecting to Wi-Fi

1. On your phone or laptop, join the open Wi-Fi network `AxeOS_XXXX` the miner creates.
2. If the setup page doesn't open by itself, browse to `http://192.168.4.1`.
3. Enter your **2.4 GHz** Wi-Fi name and password (case-sensitive) and save. The miner restarts and joins your network.

3.3 Opening the dashboard

1. Find the miner's new IP address on its screen (if fitted), in your router's client list ("AxeOS" or "ESP32"), or try `http://axeos.local`.
2. Open that address in a browser on the same network. AxeOS has no login by default.

SOURCE D-Central, "Bitaxe Gamma setup guide" and "NerdQaxe++ setup guide"; ESP-Miner (AxeOS) releases on GitHub.

04 CHAPTER Mining Configuration

The Supra Hex mines Bitcoin (SHA-256), usually on a solo pool. It has two pool slots; you can enter the same pool in both.

4.1 Setting up the pool

1. Open the **Mining / Stratum** settings in AxeOS.
2. Enter the pool URL and port (for example `public-pool.io`, port `21496`), and as user your Bitcoin address, optionally followed by `.device-name`. Password `x`.
3. Save and restart.

SOLO POOLS
Most home miners are pointed at a solo pool such as Public Pool, CKPool Solo (`solo.ckpool.org:3333`) or OCEAN (`mine.ocean.xyz:3334`). A solo block pays the full reward to the address you enter, so check it carefully; a wrong address loses the reward.

FIELD	WHAT TO ENTER
Pool / mining address	The pool's stratum address, in the format `stratum+tcp://host:port`. Copy it from your pool's "Connect" or "Getting started" page.
Worker / user	Your pool account or wallet address plus a worker name, usually `account.worker`, for example `bc1q…yourwallet.suprahex`.
Password	Optional. Most pools accept any value, such as `x`.

COIN AND POOL
The miner mines Bitcoin (SHA-256). For a solo pool, enter your own Bitcoin address as the user.

CAUTION
Use only pool addresses from the pool's official website, and always add at least one backup pool. A mistyped address mines for nobody.

SOURCE D-Central, "Bitaxe Gamma setup guide" and "NerdQaxe++ setup guide"; ESP-Miner (AxeOS) releases on GitHub.

05 CHAPTER Monitoring Performance

Check the dashboard now and then.

5.1 What normal looks like

≈ 4.2 TH/s	≈ 90 W	< 1 %
Stock settings	Power	Rejected shares

3.5–4.2 TH/s at default settings (Bitcoin Merch).

5.2 What to watch

VALUE	MEANING
Hashrate	Shown on the dashboard (and the screen, if fitted). Judge by the average, not the instant value.
Chip temperature	Keep it in the safe range shown by the firmware; improve airflow if it climbs.
Best difficulty / shares	Accepted shares show the pool is receiving work. For solo mining, "best difficulty" shows your best share so far.

06 CHAPTER Firmware and Maintenance

Keep the firmware current and the fan clean.

6.1 Firmware updates

1. Supra Hex firmware is **not** the same as single-chip Bitaxe firmware. Use only builds published for the Supra Hex, and update at your own risk.
2. In the dashboard, upload the file under the OTA / update section and keep power on until it restarts.

6.2 Tuning and reset

- Default frequency 490 MHz and core voltage 1,166 mV (Supra Hex 701 guide). Return to these if the miner becomes unstable.
- Factory reset: **Needs verification**; power-cycle by unplugging for 10 seconds.

SOURCE D-Central, "Bitaxe Gamma setup guide" and "NerdQaxe++ setup guide"; ESP-Miner (AxeOS) releases on GitHub.

07 CHAPTER Troubleshooting

Start with the symptom table.

SYMPTOM	CHECK
Doesn't start	Check the supply is 12 V DC from the supplied adapter and the power cord is fully seated and rated for the current.
No setup hotspot	Wait up to a minute after power-on; re-plug the power if it still doesn't appear.
Can't join Wi-Fi	Use a 2.4 GHz network (5 GHz isn't supported) and check the password; names and passwords are case-sensitive.
No shares on the pool	Re-check the pool address, port and worker (your wallet address for solo pools).
Overheating or instability	Return frequency and voltage to stock and improve airflow.

SOURCE D-Central, "Bitaxe Gamma setup guide" and "NerdQaxe++ setup guide"; ESP-Miner (AxeOS) releases on GitHub.

ONEMINERS
For a hosted miner, send the symptom and your miner's service ID to **service@oneminers.com** or WhatsApp **+1 305 867 6143**. Repairs under warranty are handled on site by our repair team.

08 CHAPTER OneMiners Platform Guide

Miners hosted by OneMiners are monitored and managed from your account at app.oneminers.com or the OneMiners mobile app. Screens in this chapter are from OneMiners platform v1.2 and show example values from other miners, not an Supra Hex 702.

8.1 Miner details

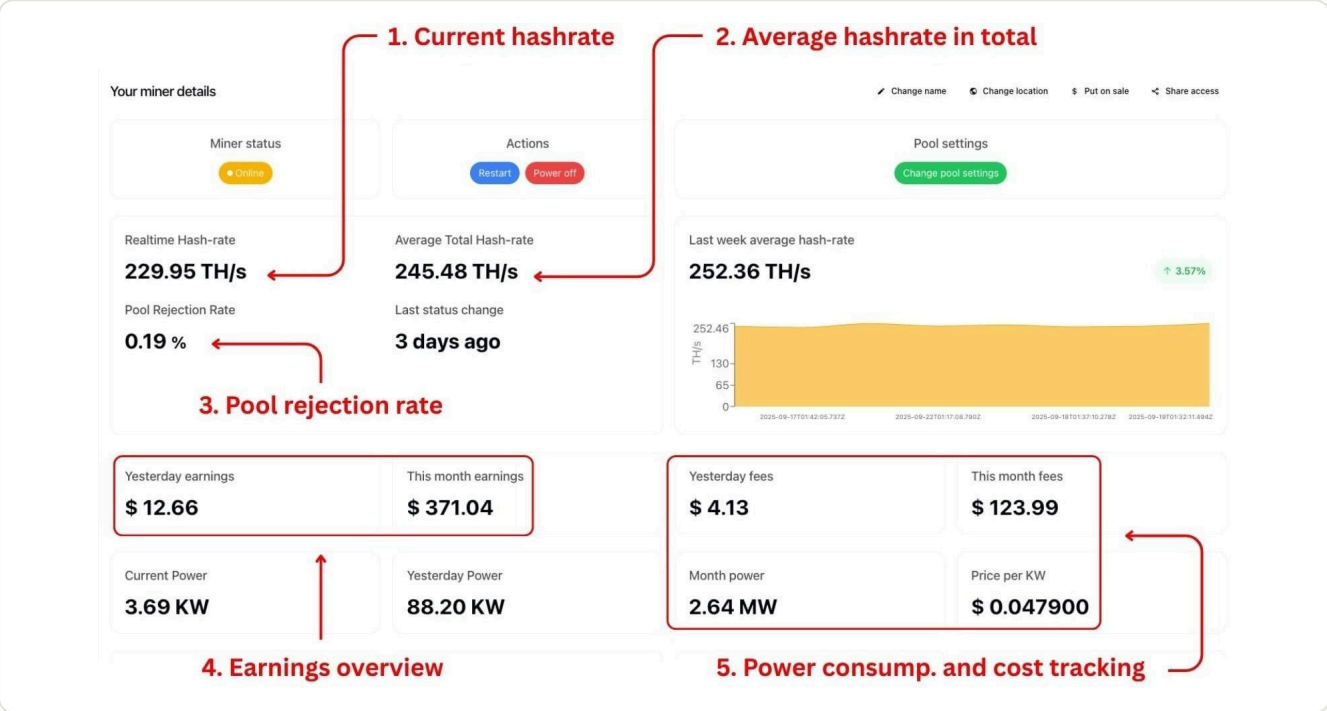

Figure 8-1 Miner details on OneMiners platform v1.2 (example values).

1 · Current hashrate	Real-time hashrate (for the Supra Hex 702, in TH/s). It moves with network stability, hardware and pool communication.
2 · Average hashrate	Average over a longer period (typically 24 h). The most reliable measure of performance; for the Supra Hex 702, expect about 4.074–4.326 TH/s.
3 · Pool rejection rate	Share of submitted shares the pool rejected. Below 1% is healthy.
4 · Earnings overview	Estimated earnings for the selected period, based on accepted shares.
5 · Power and cost	Real-time and historical energy use (kW) and its cost at your configured price per kWh.

8.2 Pool settings

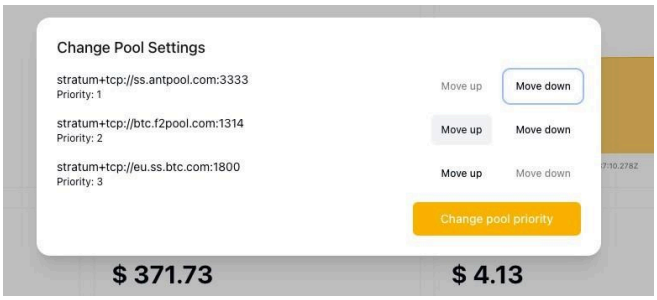

Figure 8-2 Change Pool Settings.

- Up to three pools can be connected.
- Pools are listed in priority order. If the first is unavailable, the miner switches to the second, then the third.
- Use **Move up** / **Move down** to set the order, then **Change pool priority** to apply it.

8.3 Earnings and fees



Figure 8-3 Earnings, fees, power and price per kWh (example values).

- **Earnings:** daily, monthly and cumulative mining rewards in USD or your selected currency.
- **Fees:** pool and platform fees deducted from earnings, shown daily and monthly.
- **Net result:** earnings minus fees, which is your net mining income.

8.4 Hardware status

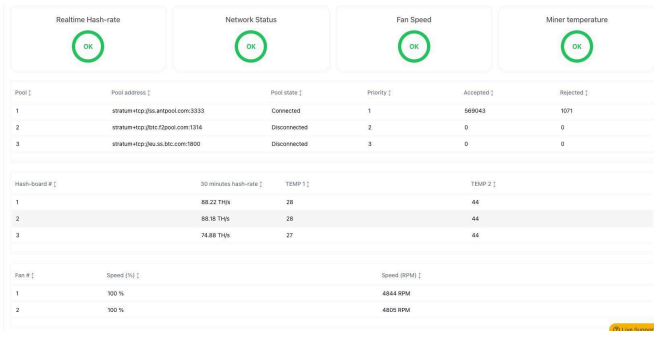

Figure 8-4 Hardware status (example from an air-cooled miner).

- **Network status:** whether the miner is connected to its pools. Address disconnections immediately.
- **Miner temperature** and **hashboard table:** per-board hashrate and temperatures. Useful for spotting an underperforming board early.

> **AIR-COOLED UNITS**
> Fan speed is shown per fan (1 fan on the Supra Hex 702). A slow or stopped fan raises temperatures and stops mining, so act on fan alerts quickly.

ONEMINERS OneMiners platform v1.2. Confirm layout against the current version of your account.

CHAPTER 09

OneMiners Hosting and Warranty

OneMiners hosts customer-owned miners in its data centers, providing power, cooling, racking and monitoring. Terms below reflect OneMiners' published pages as checked on 7 November 2026.

9.1 Hosting

- Hosting is offered across 17 data centers worldwide, **from 3.6¢ per kWh** at the time of writing.
- Locations include Nigeria, Ethiopia, Dubai, the USA (Texas, Houston, Georgia, South Carolina, Kansas and a no-service-fee option), Finland, Norway, Canada, Brazil, Czechia, China and Paraguay.
- Hosted orders are deployed turnkey; OneMiners racks, connects and monitors the miner.
- Home miners like the Supra Hex 702 are usually run at home. If you want one hosted, ask sales which locations accept it.

Current prices and locations: oneminers.com/pages/hosting-centers.

9.2 Warranty

HOSTED WITH ONEMINERS

7-year full warranty for miners hosted in the USA, Dubai, Norway, Finland, Ethiopia, Nigeria and China.

- Free on-site repairs
- No-cost replacement of power supplies and cables
- No labour or diagnostic fees

SHIPPED TO YOU

Standard 12-month warranty, unless the manufacturer specifies otherwise.

- Free repair of manufacturing defects
- Replacement of defective units when necessary
- Valid only when the miner is operated according to official instructions

All customers during warranty

Remote diagnostics, real-time monitoring, 24/7 technical support, and firmware upgrades and maintenance.

Exclusions

The warranty may be voided by damage from misuse, unauthorised modifications or non-compliant operation. For the Supra Hex 702, this includes damage from running outside **Needs verification** or 12 V DC from the supplied adapter, undersized power cords, blocked airflow, firmware for other models, or opening the unit.

Out of warranty

Repairs typically cost **US$80–220**, depending on the fault and parts required.

Making a claim

Contact OneMiners support with your miner's hosting details and service ID through oneminers.com/pages/contact or **service@oneminers.com**.

ONEMINERS OneMiners Warranty Policy, oneminers.com/pages/warranty-policy . The policy page prevails if it differs from this summary.

10 CHAPTER Wallet and Mining Rewards

Rewards from a hosted miner are credited to your OneMiners wallet, where you can withdraw them or exchange between currencies.

10.1 Automatic mining balance

- The miner starts generating rewards as soon as it is installed and activated.
- If no energy payment has been preloaded, mining continues and energy costs and fees are deducted automatically from the rewards.
- If funds are preloaded in advance, earnings are credited without automatic deductions.
- You can change your payout wallet address in the wallet settings.

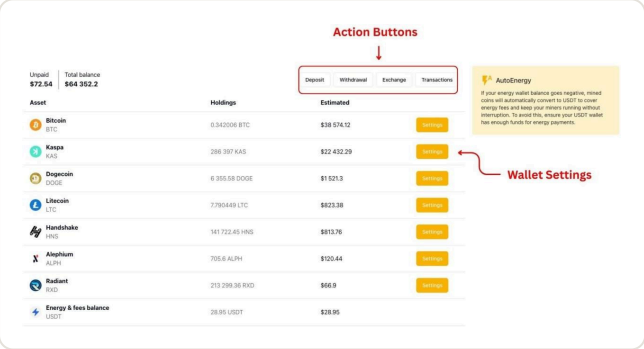

Figure 10-1 Wallet section.

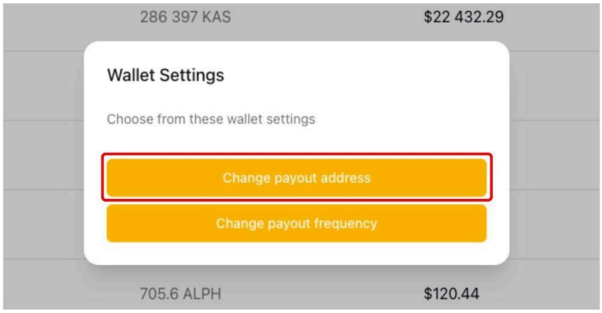

Figure 10-2 Changing the payout address.

10.2 Withdrawals

1. Go to **Wallet** › **Withdrawal**.
2. Add a crypto wallet address or a bank account.
3. Select the currency, enter the amount and confirm.

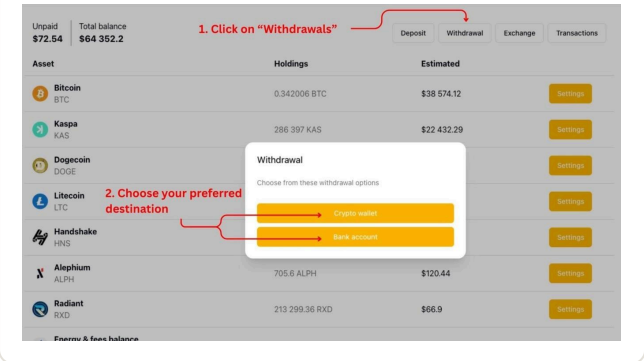

Figure 10-3 Choosing a withdrawal destination.

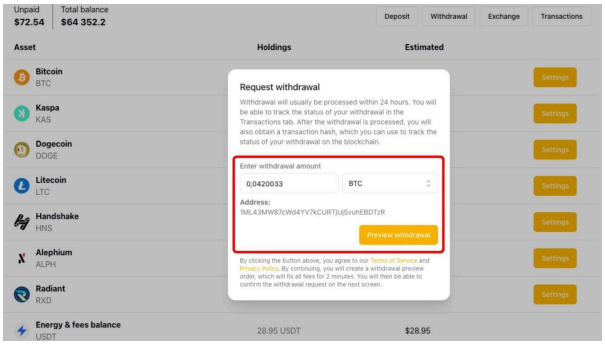

Figure 10-4 Choosing currency and amount.

10.3 Exchange

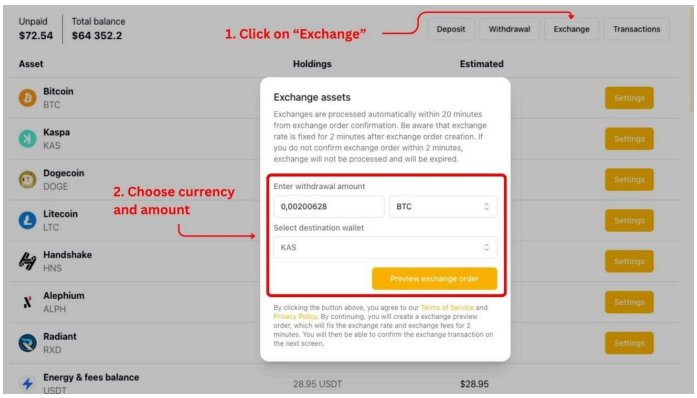

Figure 10-5 Exchanging currencies.

1. Go to **Wallet** › **Exchange**.
2. Select the currencies to exchange. You can also convert directly into **Energy & Fees** funds to keep the miner running.
3. Enter the amount and confirm.

> **BEFORE YOU WITHDRAW**
> Double-check addresses and networks. Crypto transfers to a wrong address usually can't be reversed. Keep enough Energy & Fees balance to avoid deductions from your rewards.

ONEMINERS OneMiners platform v1.2.

CHAPTER 11

Additional OneMiners Features

Optional tools in your OneMiners account. Availability and settings can change; check your dashboard for what is active on your account.

11.1 AI Smart Mining

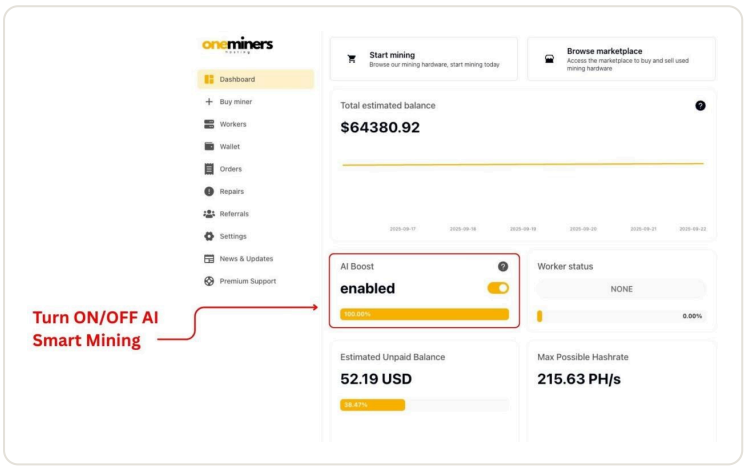

Figure 11-1 AI Boost toggle on the dashboard (platform v1.2).

AI Smart Mining analyses market conditions and pool performance and can switch your miner to the pools it calculates are most profitable.

- Turn it on or off with the **AI Boost** toggle on your dashboard.
- Your hardware keeps mining to your own account and wallet.

Results depend on hardware and market conditions and aren't guaranteed. More information: oneminers.com/pages/ai-smart-mining.

11.2 OneMiners mobile app

Monitor and manage your miners from your phone: start and stop miners, view hashrate, power use and hardware status, and manage balances and withdrawals. The app is built on the CircleHash white-label hosting platform and is free.

App Store

Google Play

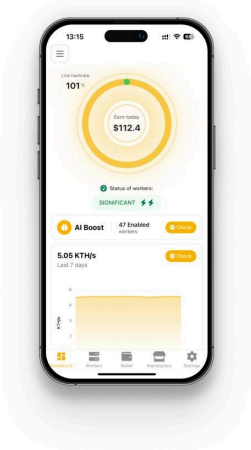

11.3 Profitability tools

Mining income from the Supra Hex 702 depends on the BTC price, network difficulty, transaction fees and your electricity cost, all of which change daily. For current estimates, use the live tools rather than figures printed in a manual:

- Miner profitability table: oneminers.com/pages/miner-profitability
- Bitcoin miners collection: oneminers.com/collections/bitcoin-miners

For the Supra Hex 702, use 4.2 TH/s and 90 W with your own price per kWh. Estimates aren't financial advice.

12 CHAPTER Official Resources and Support

12.1 Resources

OPEN SOURCE
ESP-Miner (AxeOS) firmware
github.com/skot/ESP-Miner

ONEMINERS
Manuals & Firmware Library
oneminers.com/pages/manuals-and-firmware

ONEMINERS
Product page
oneminers.com/products/bitaxe-supra-hex-702-4-2-th-s

ONEMINERS
Warranty policy
oneminers.com/pages/warranty-policy

ONEMINERS
Hosting locations
oneminers.com/pages/hosting-centers

12.2 Contact OneMiners

SUPPORT, 24/7

+1 305 867 6143

WhatsApp

+1 607 9009 004 · Sales, USA

service@oneminers.com · Service and repairs
sales@oneminers.com · Sales
payinquire@oneminers.com · Payments

Telegram: t.me/oneminers_hosting

ADDRESS

CIRCLEHASH LLC
701 Tillery Street
Austin, Texas 78702, USA

Contact page

Manuals library

12.3 Sources used for this version

1. Bitcoin Merch, "Set up guide for the Bitaxe SupraHex": chips, hashrate, power, 12 V adapter, Wi-Fi, noise, hotspot, pool settings, default frequency and voltage.
2. D-Central, "Bitaxe Hex setup guide": 12 V input, PSU sizing, AxeOS setup.
3. OneMiners product page, Bitaxe Supra Hex 702 4.2 TH/s.
4. OneMiners: product page, Warranty Policy, hosting pages, AI Smart Mining page, Media Kit, site contact details. All checked 7 November 2026.

12.4 Revision history

VERSION	DATE	CHANGES
V1.0	Nov 2026	First edition on the OneMiners media-kit template: manufacturer specifications with conflicts listed in 1.4, safety, installation, setup, pools, monitoring, firmware, maintenance and troubleshooting. Current warranty, hosting and contact details.